

ELECTRICAL WIRING DIAGRAMS

ABBREVIATION

The following abbreviations are used in this wiring diagram.


ABS	= Anti-Lock Brake System
A/C	= Air Conditioner
A/T	= Automatic Transmission
CD	= Compact Disc
COMB.	= Combination
ECT	= Electronic Controlled Transmission
ECU	= Electronic Control Unit
EFI	= Electronic Fuel Injection
EGR	= Exhaust Gas Recirculation
Ex.	= Except
IG	= Ignition
LH	= Left-Hand
O/D	= Overdrive
PPS	= Progressive Power Steering
RH	= Right-Hand
SW	= Switch
TDCL	= Total Diagnostic Communication Link
TRAC	= Traction Control System
TEMP.	= Temperature
VSV	= Vacuum Switching Valve
w/	= With
w/o	= Without

HOW TO READ THIS SECTION

The system shown here is an EXAMPLE ONLY. It is different to the actual circuit shown in the wiring diagram section.

EWD-2

ELECTRICAL WIRING DIAGRAMS

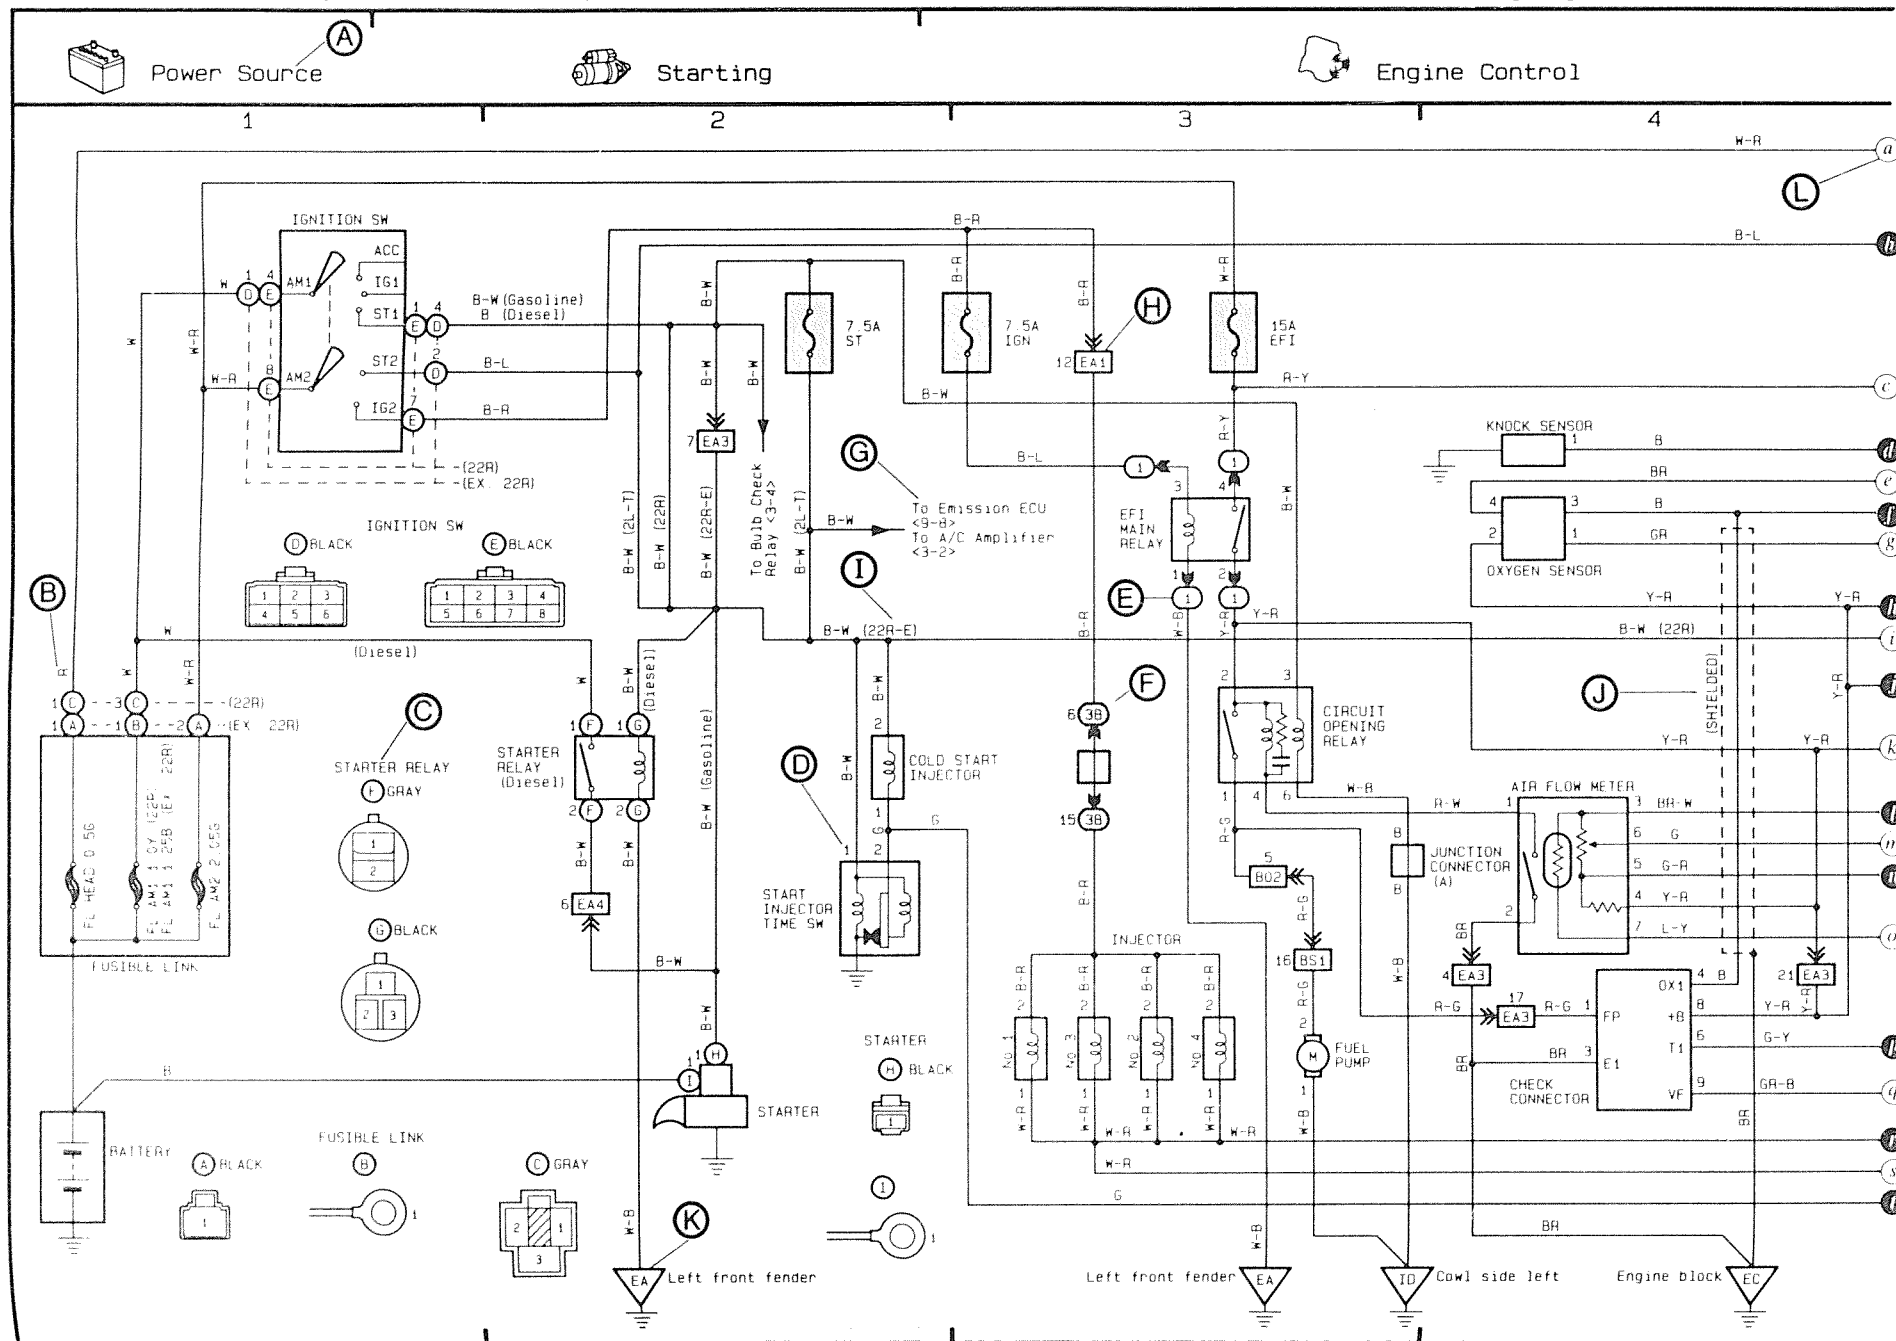

(A): System Title


(B): Indicates the wiring color.

Wire colors are indicated by an alphabetical code.

B = Black	L = Blue	R = Red
BR = Brown	LG = Light Green	V = Violet
G = Green	O = Orange	W = White
GR = Gray	P = Pink	Y = Yellow

The first letter indicates the basic wire color and the second letter indicates the color of the stripe.

 
Example: L - Y




(C): Indicates the connector to be connected to a part (the numeral indicates the pin No.)

(D): Indicates the pin number of the connector. The numbering system is different for female and male connectors.

 Example: Numbered in order from upper left to lower right Numbered in order from upper right to lower left



Female

 

Male

The numbering system for the overall wiring diagram is the same as above.

(E): Indicates a Relay Block. No shading is used and only the Relay Block No. is shown to distinguish it from the J/B.

Example: ① Indicates Relay Block No. 1.

(F): Junction Block (The number in the circle is the J/B No. and the connector code is shown beside it). Junction Blocks are shaded to clearly separate them from other parts (different junction blocks are shaded differently for further clarification).


Example:



3B indicates that it is inside Junction Block No. 3.


(G): Indicates related system.

(H): Indicates the wiring harness and wiring harness connector. The wiring harness with male terminal is shown with arrows (↗). Outside numerals are pin numbers.

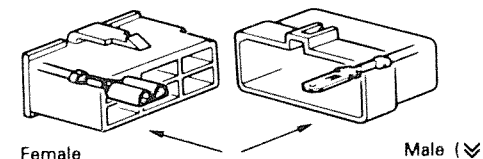

(I): () is used to indicate different wiring and connector, etc. when the vehicle model, engine type, or specification is different.

 (J): Indicates a shielded cable.






(K): Indicates a ground point.


(L): The same code occurring on the next page indicates that the wire harness is continuous.

SYSTEM INDEX

   1992 Model (Location No.1 to 27)

SYSTEMS	LOCATION	SYSTEMS	LOCATION	SYSTEMS	LOCATION
ABS and Traction Control 	 8-2	Horn 	13-2	Seat Heater 	14-2
ABS (Anti-Lock Brake System) 	9-2	Ignition 	1-5	Shift Lock 	15-2
Automatic Air Conditioner 	23-2	Illumination 	4-7 (for USA) 5-7 (for Canada)	SRS AIRBAG 	15-3
Auto Antenna 	20-4 (w/o CD Player) 21-8 (w/ CD Player)	Interior Light 	6-2	Starting 	1-3
Back-Up Light 	3-8	Liquid Crystal Inner Rear View Mirror 	12-1	Taillight and Stop Light 	4-5 (for USA) 5-5 (for Canada)
Cellular Mobile Telephone 	19-2	Moon Roof 	12-2	Theft Deterrent and Door Lock Control 	18-2
Charging 	1-2	Power Seat (Driver's) 	11-5	Turn Signal and Hazard Warning Light 	7-3
Cigarette Lighter 	14-4	Power Seat (Passenger's) and Electric Tension Reducer 	11-7	Unlock and Seat Belt Warning 	4-3 (for USA) 5-3 (for Canada)
Combination Meter 	22-2	Power Source 	1-23-1	Wiper and Washer 	13-3
Cornering Light 	7-2	Power Tilt and Power Telescopic 	11-2	Wireless Door Lock Remote Control 	18-7
Electronically-Controlled Hydraulic Driven Cooling Fan 	17-2	Power Window 	12-3	Junction Block and Wire Harness Connector	24-2
Cruise Control 	16-2	PPS (Progressive Power Steering) 	15-2	Connector Joining Wire Harness and Wire Harness	24-2 25-2 26-2 27-2
ECT and A/T Indicator 	3-2	Radio and Player 	20-2 (w/o CD Player) 21-2 (w/ CD Player)		
Engine Control	2-2	Rear Window Defogger and Mirror Heater 	14-3		
Headlight and Light Auto Turn Off (for USA) 	4-2	Remote Control Mirror 	10-2		
Headlight (for Canada) 	5-2				

Ignition

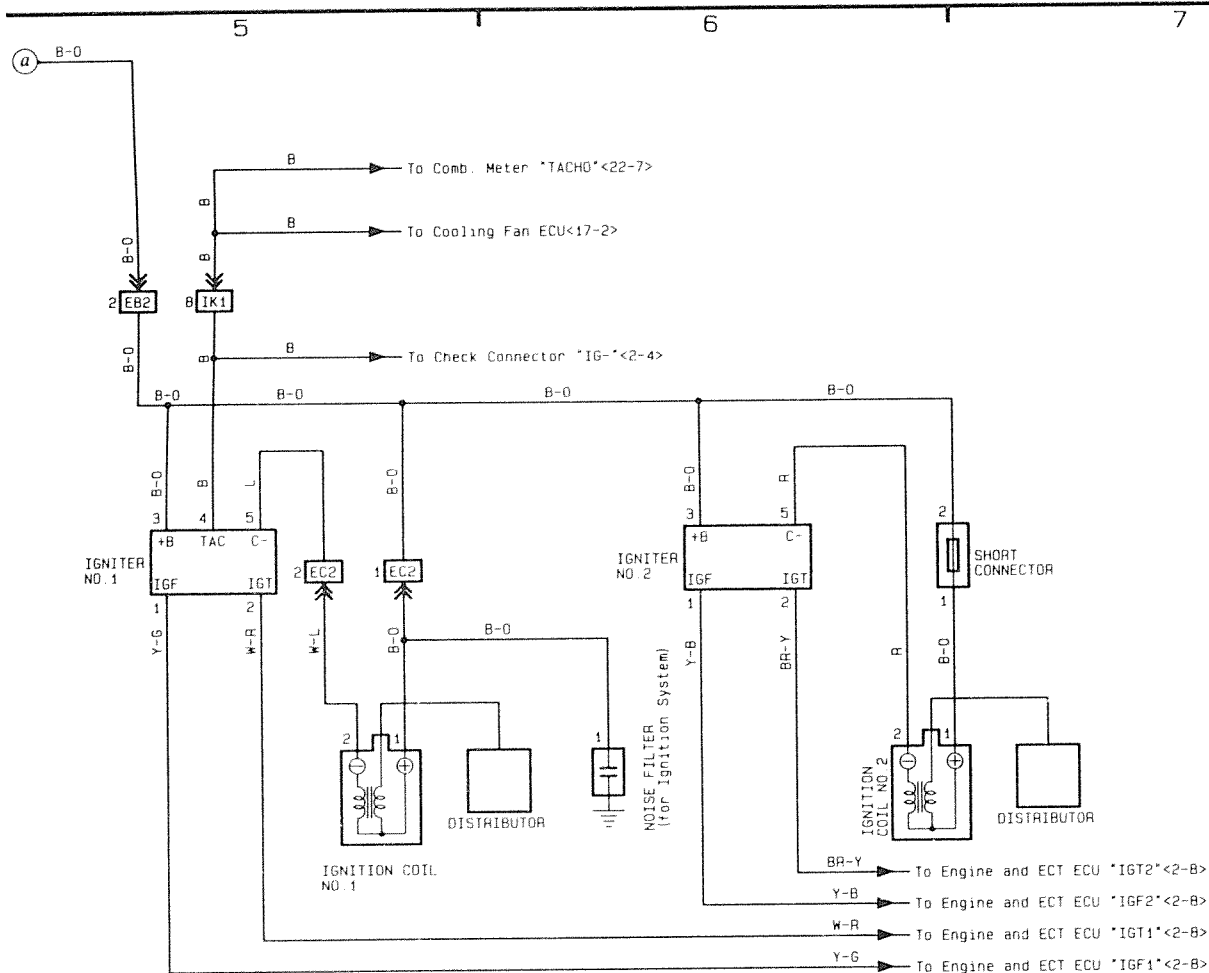




Power
Source


ECT and A/T Indicator

B-Y	<i>a</i>
W	<i>b</i>
G	<i>c</i>
R-B	<i>d</i>
G-O	<i>e</i>
Y	<i>f</i>
GR-R	<i>g</i>


KICK
DOWN

Left kick panel

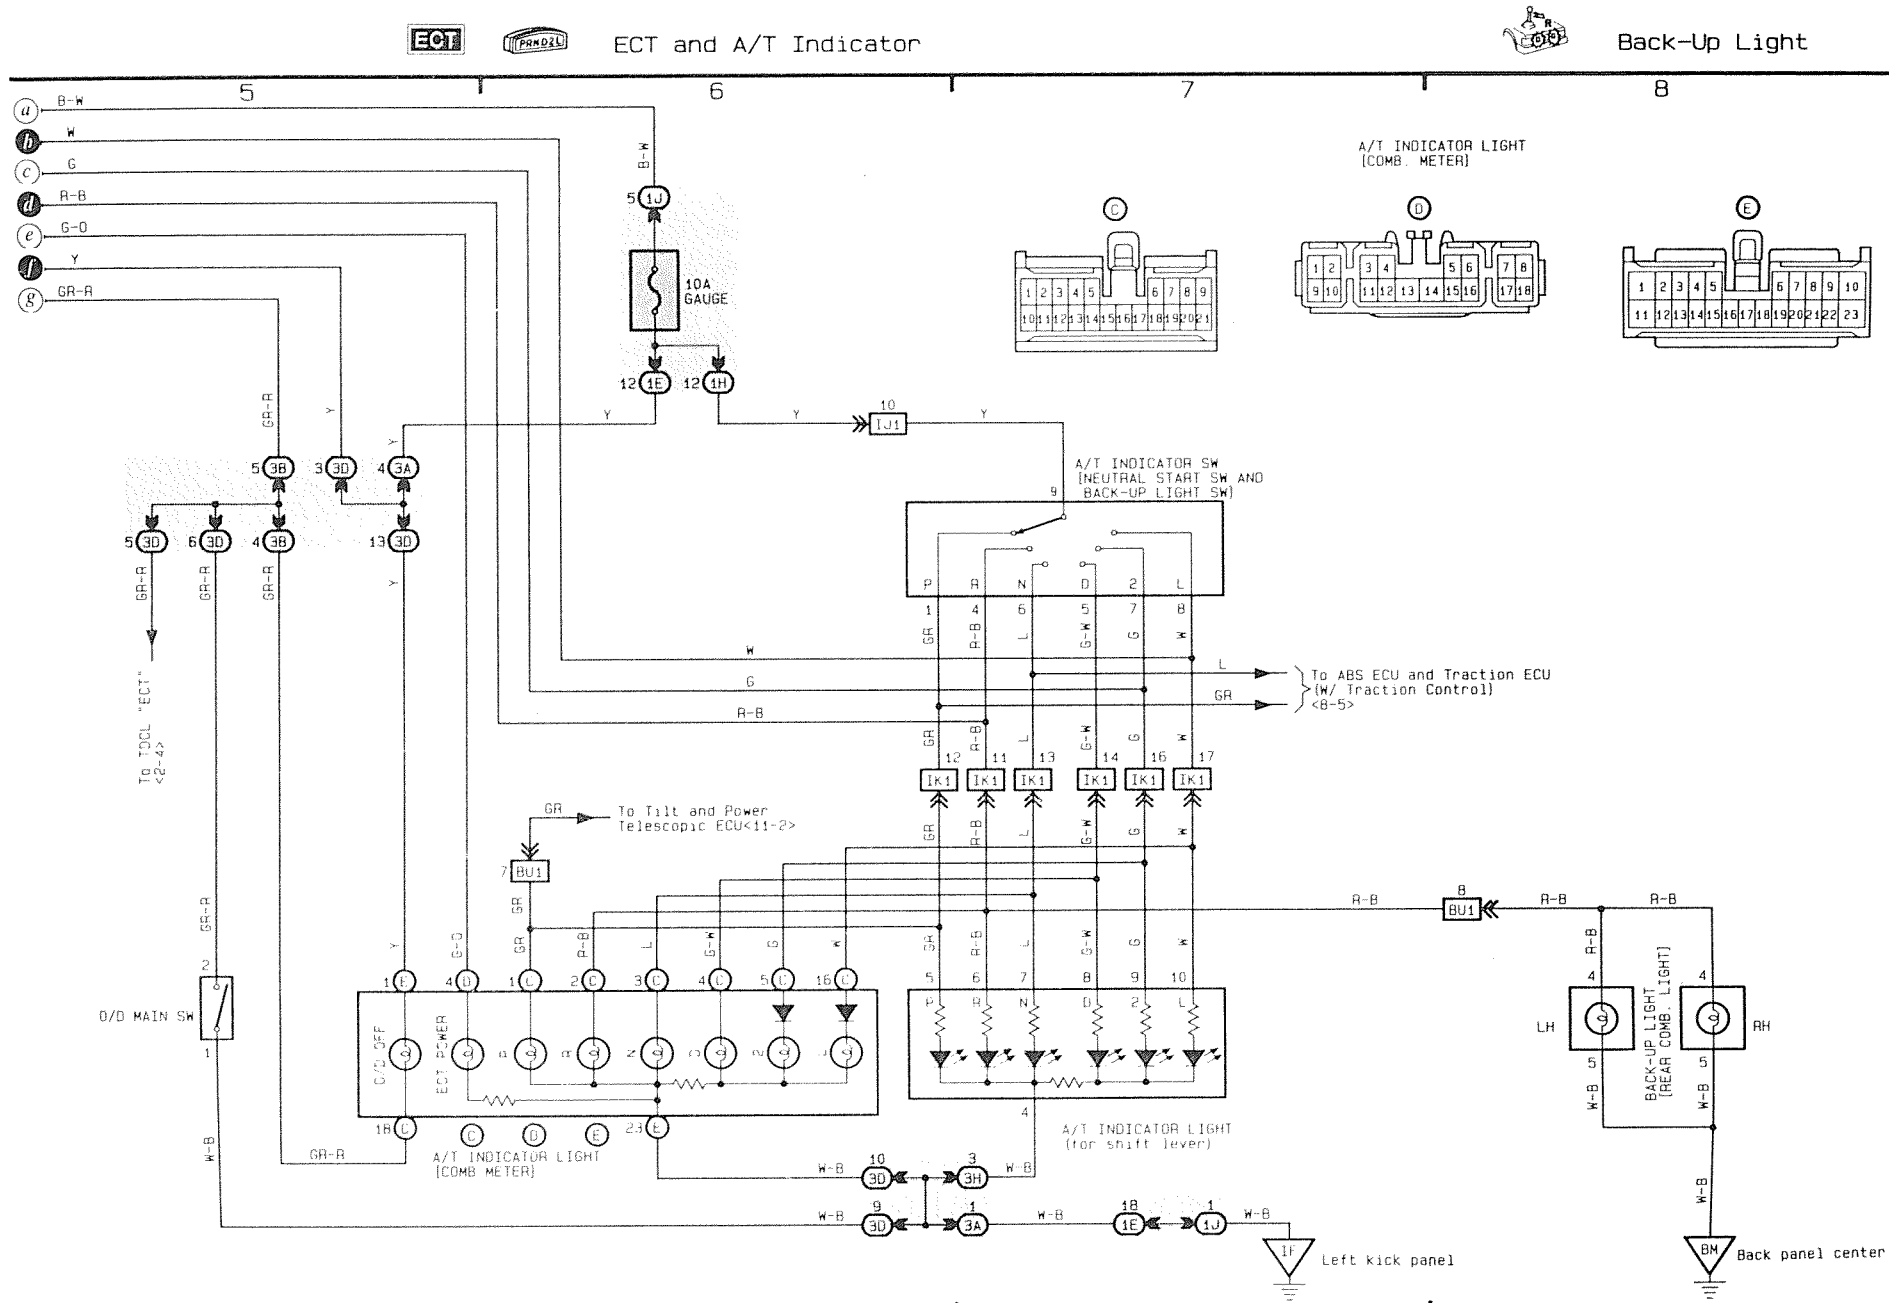

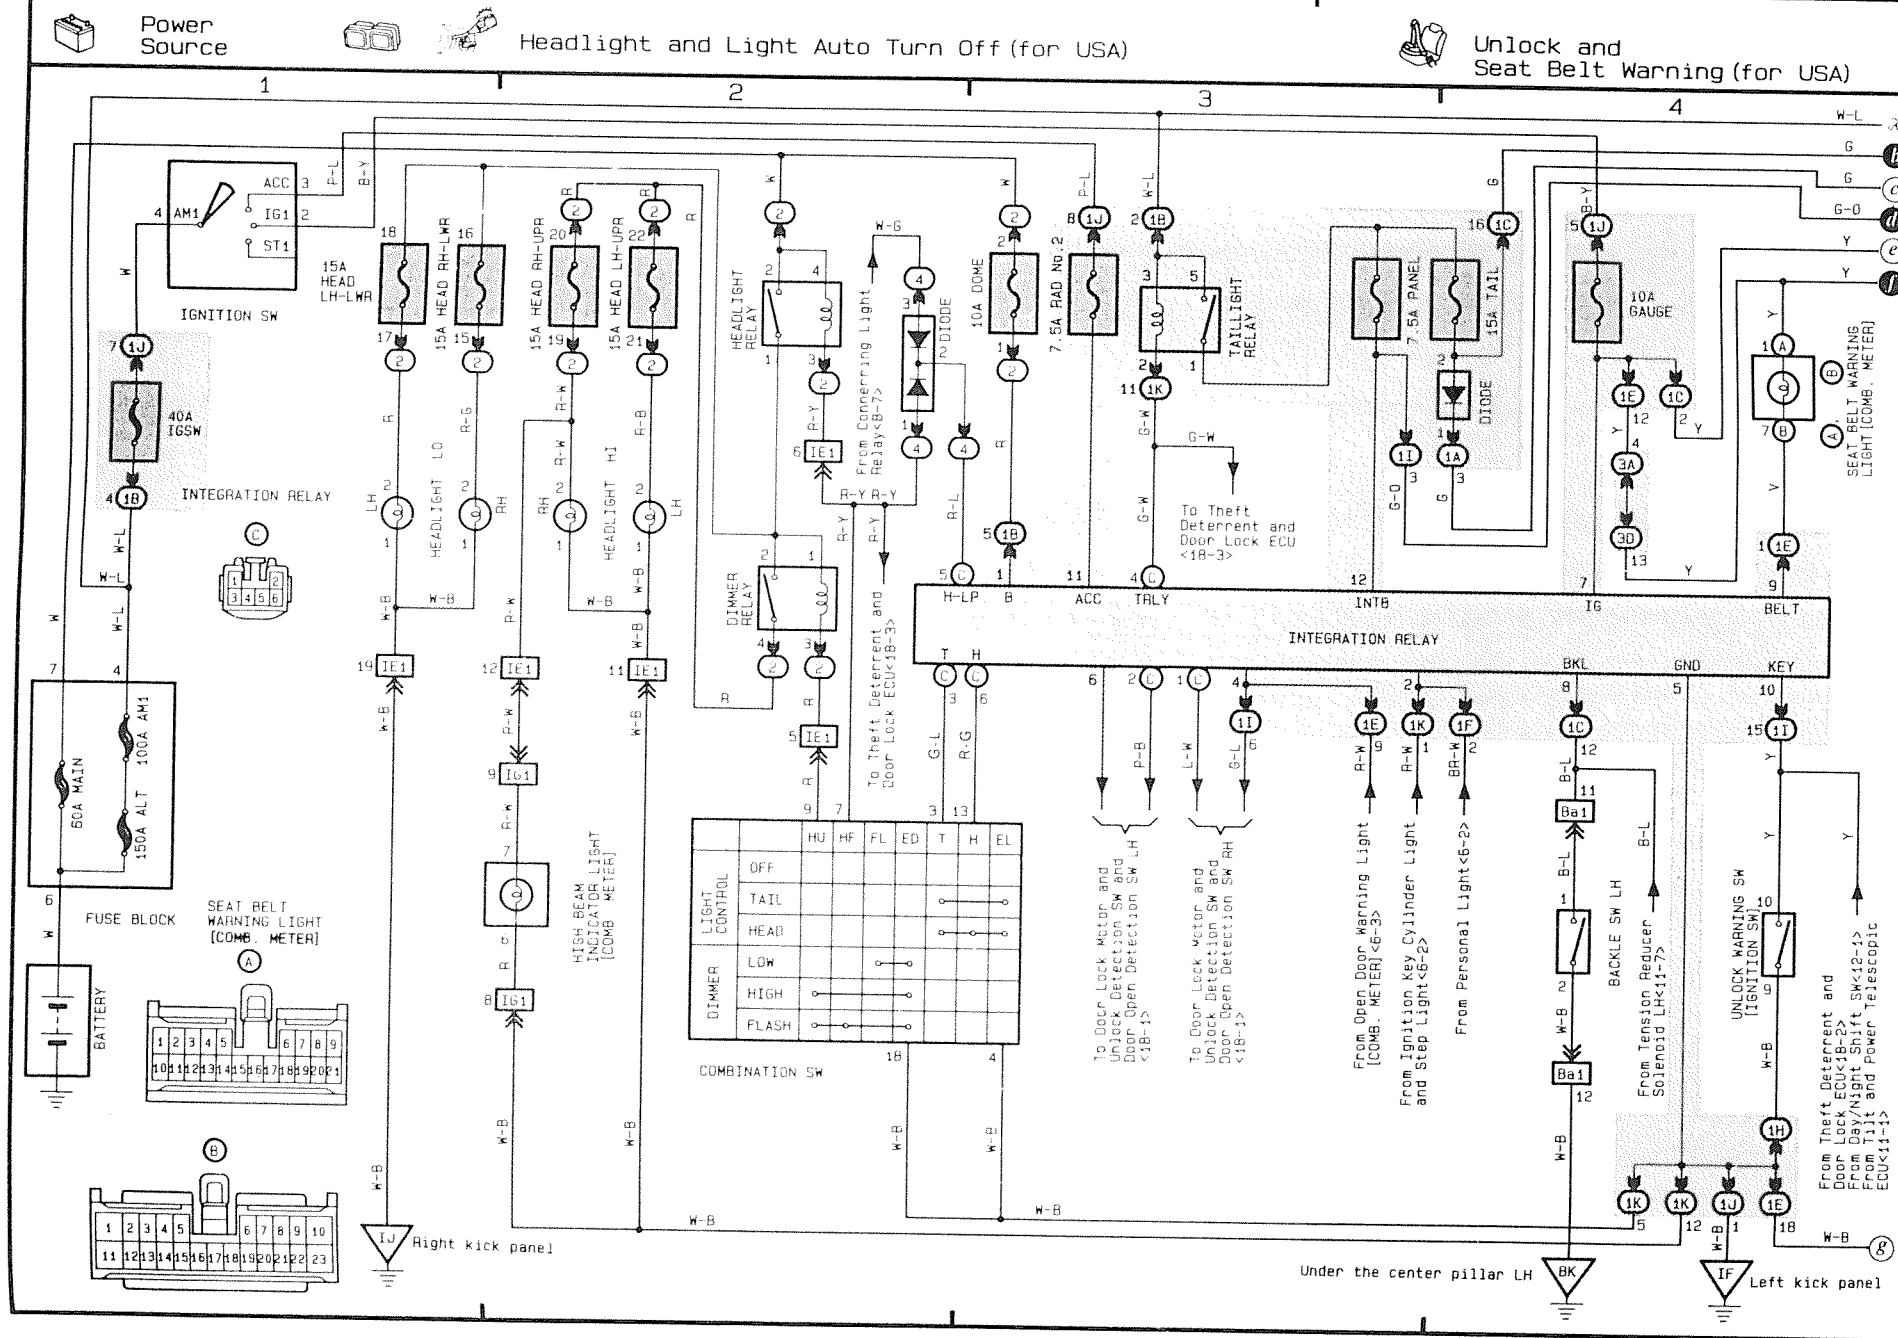

 *1: (w/ Rear Spoiler)
*2: (w/o Rear Spoiler)






Taillight and Stop Light (for Canada)



Illumination (for Canada)

*1: (w/ Rear Spoiler)
 *2: (w/o Rear Spoiler)

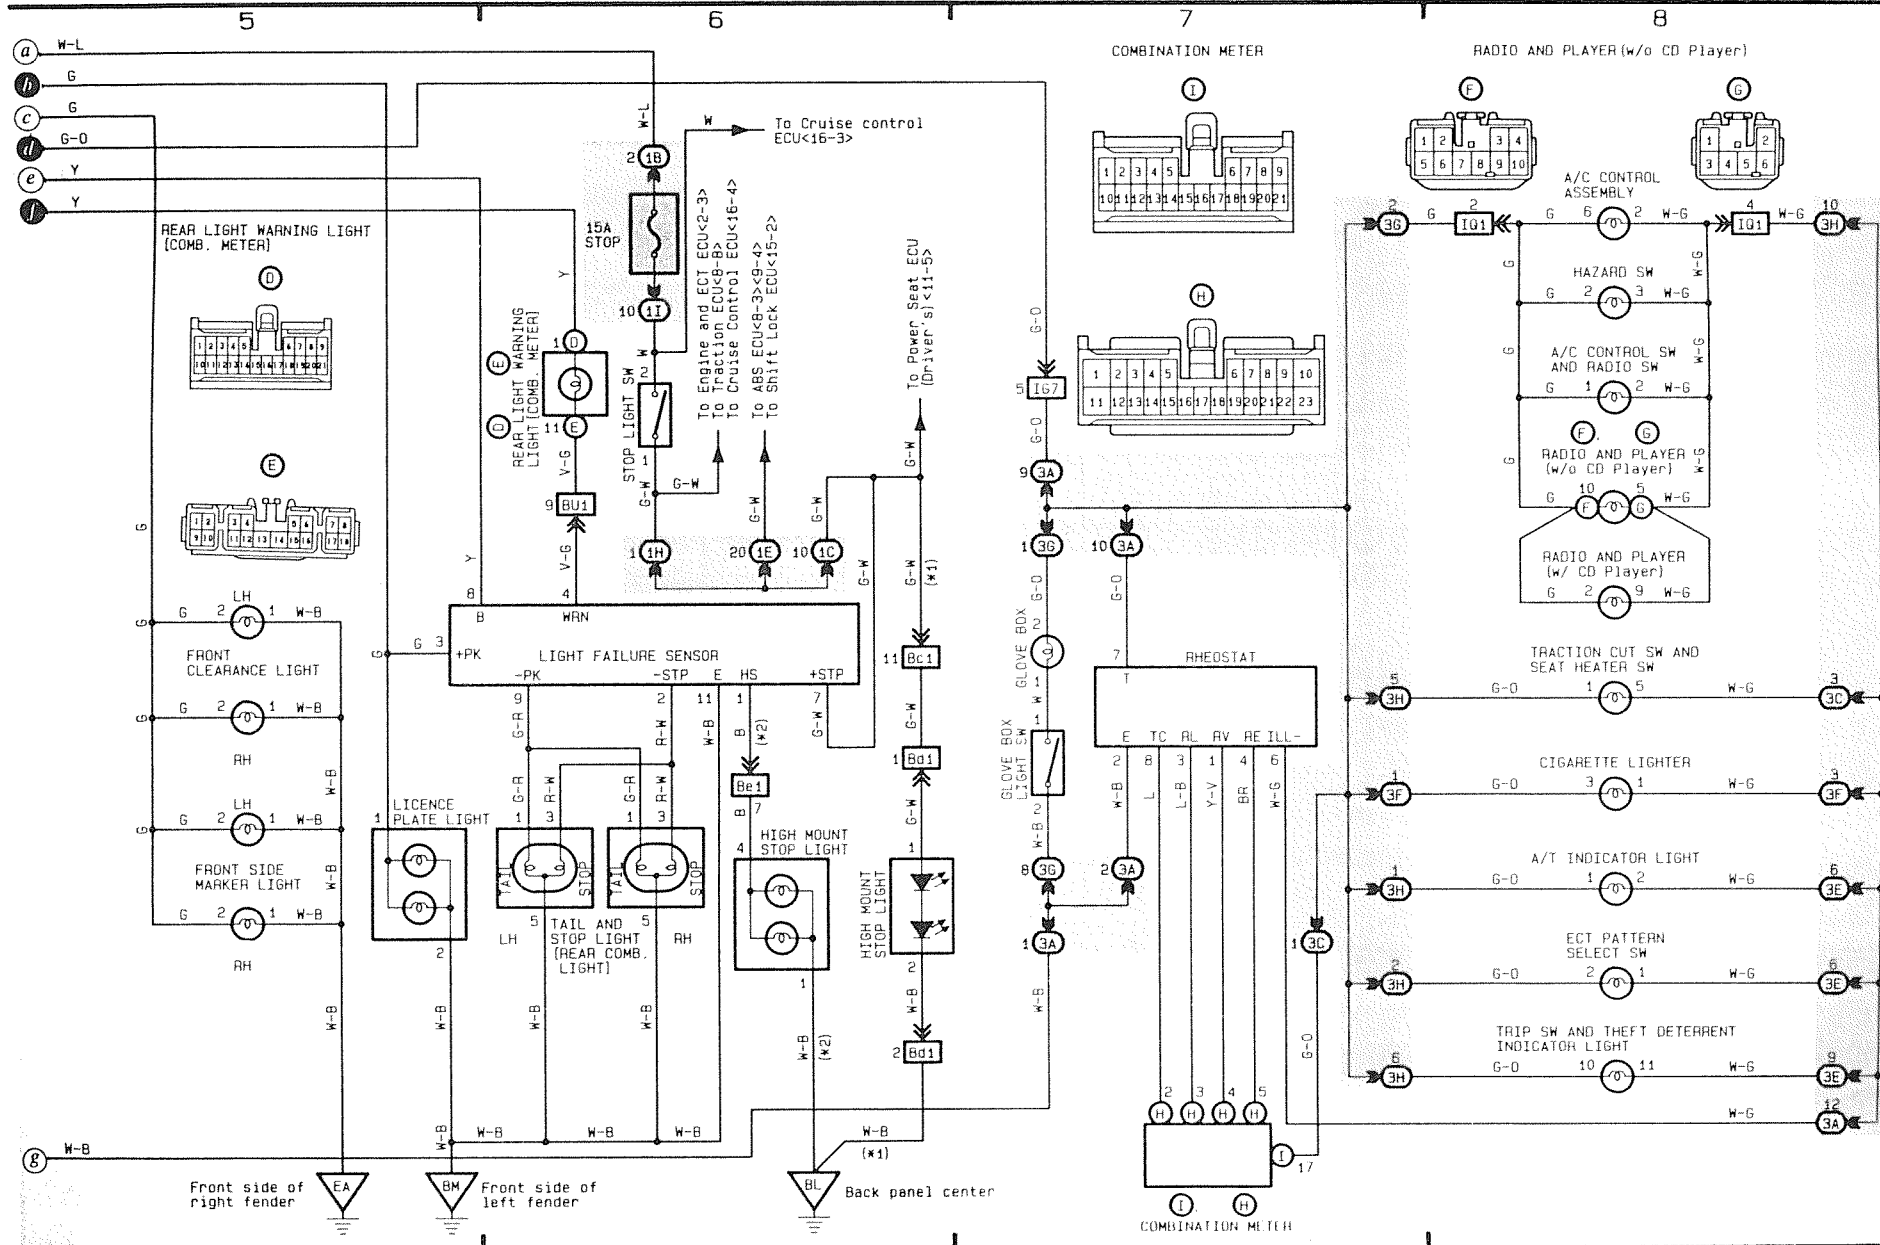




Power Source




Cornering Light





Turn Signal and Hazard Warning Light

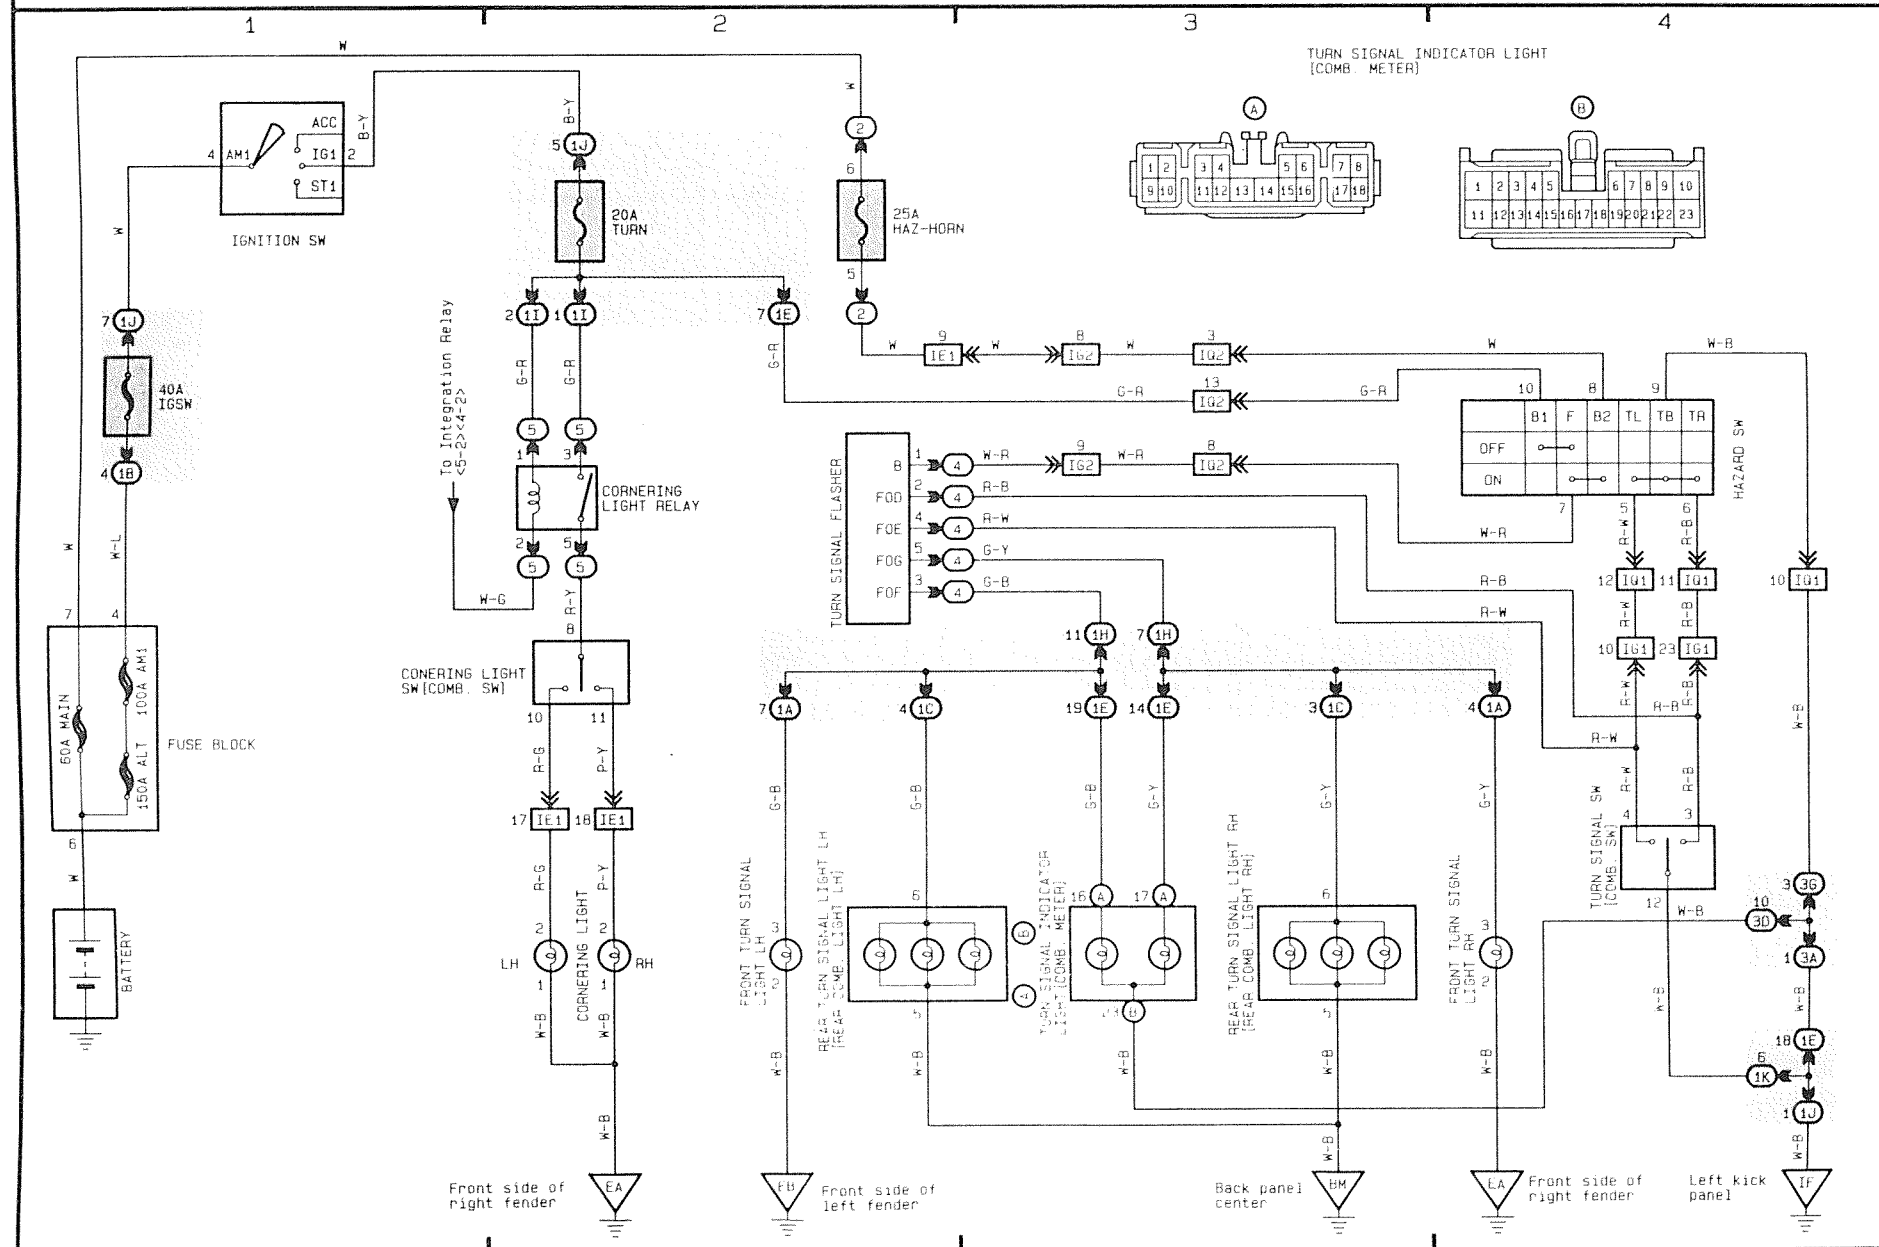


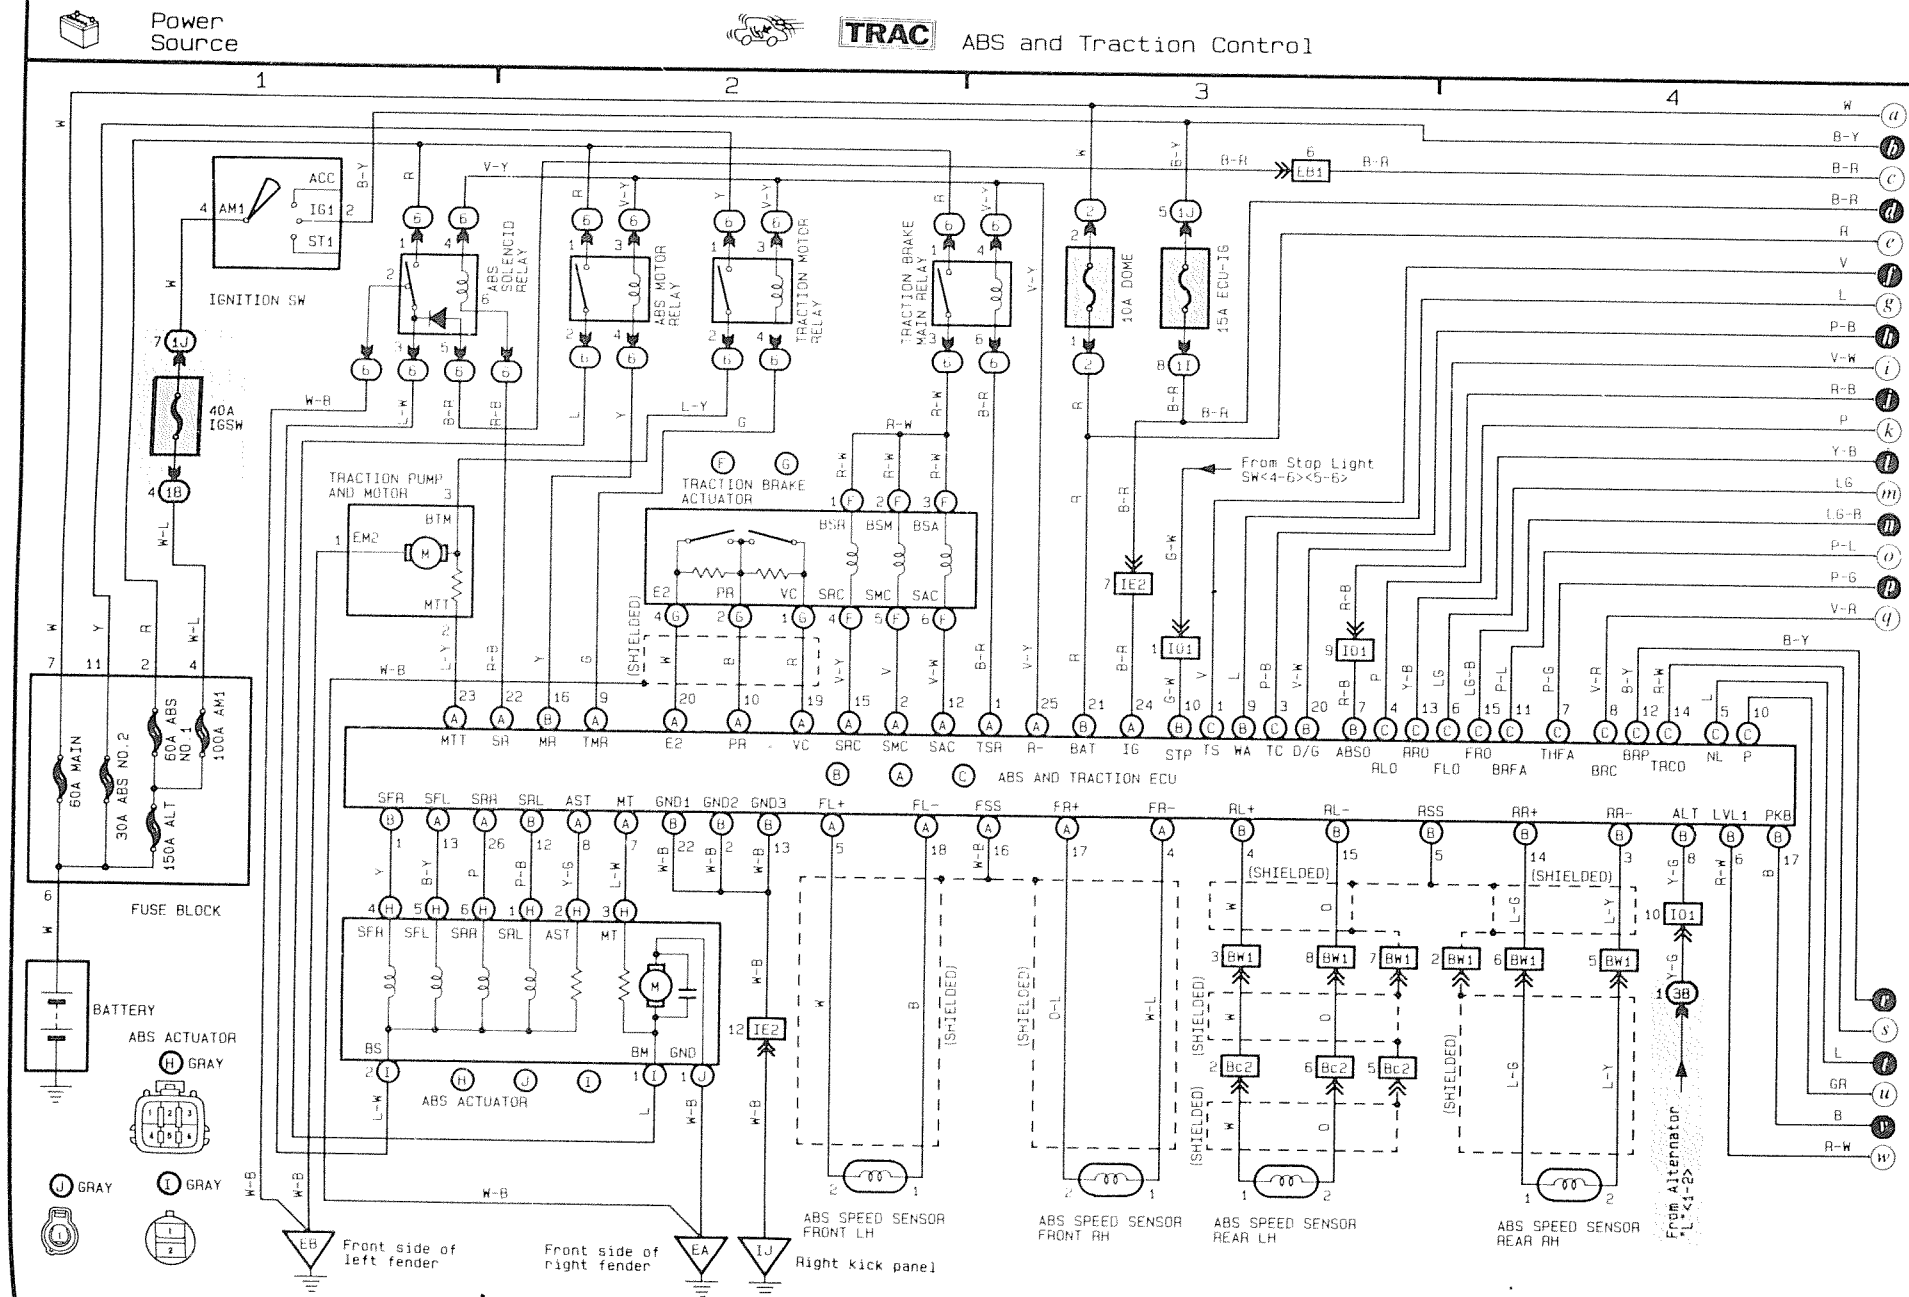


ABS and Traction Control

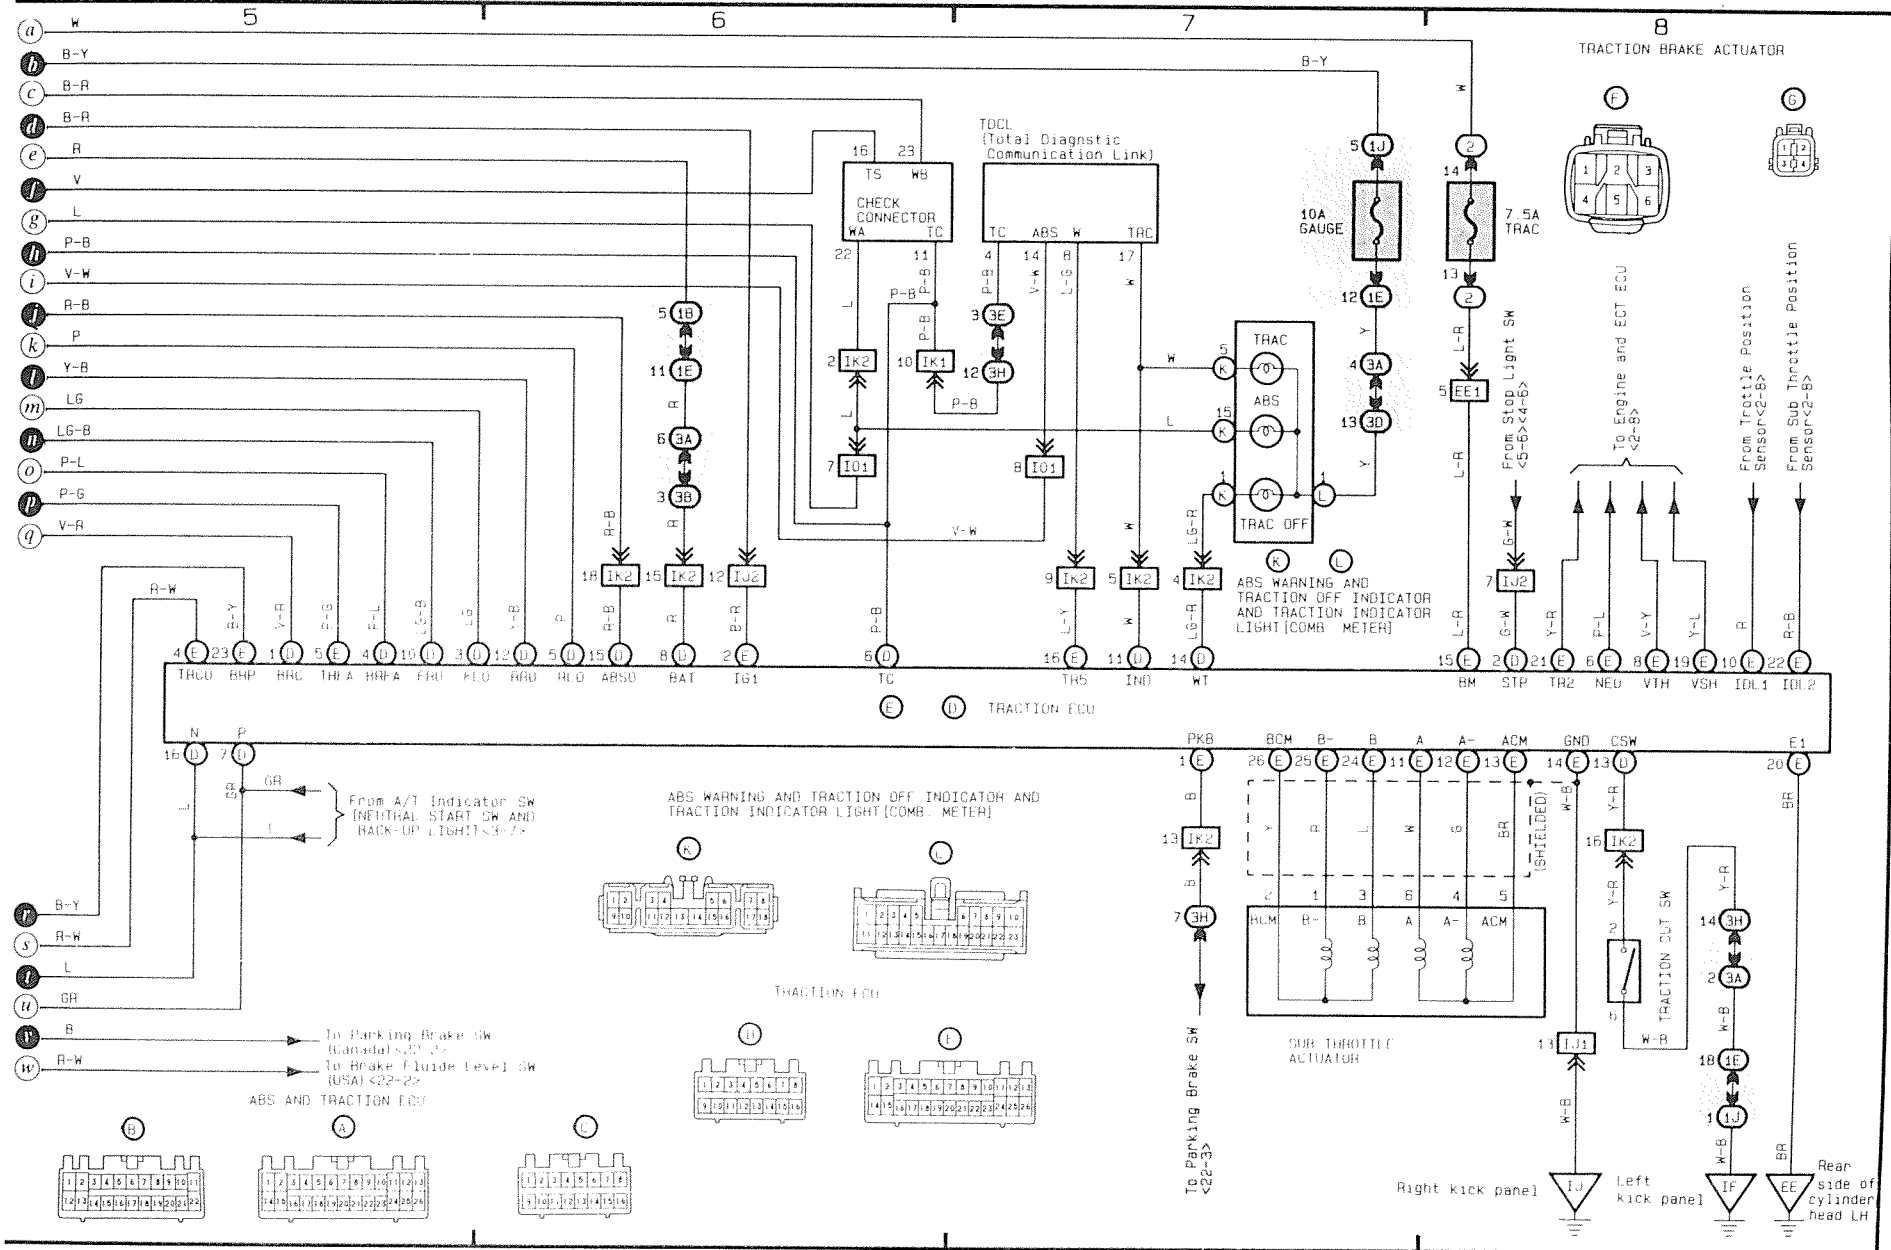

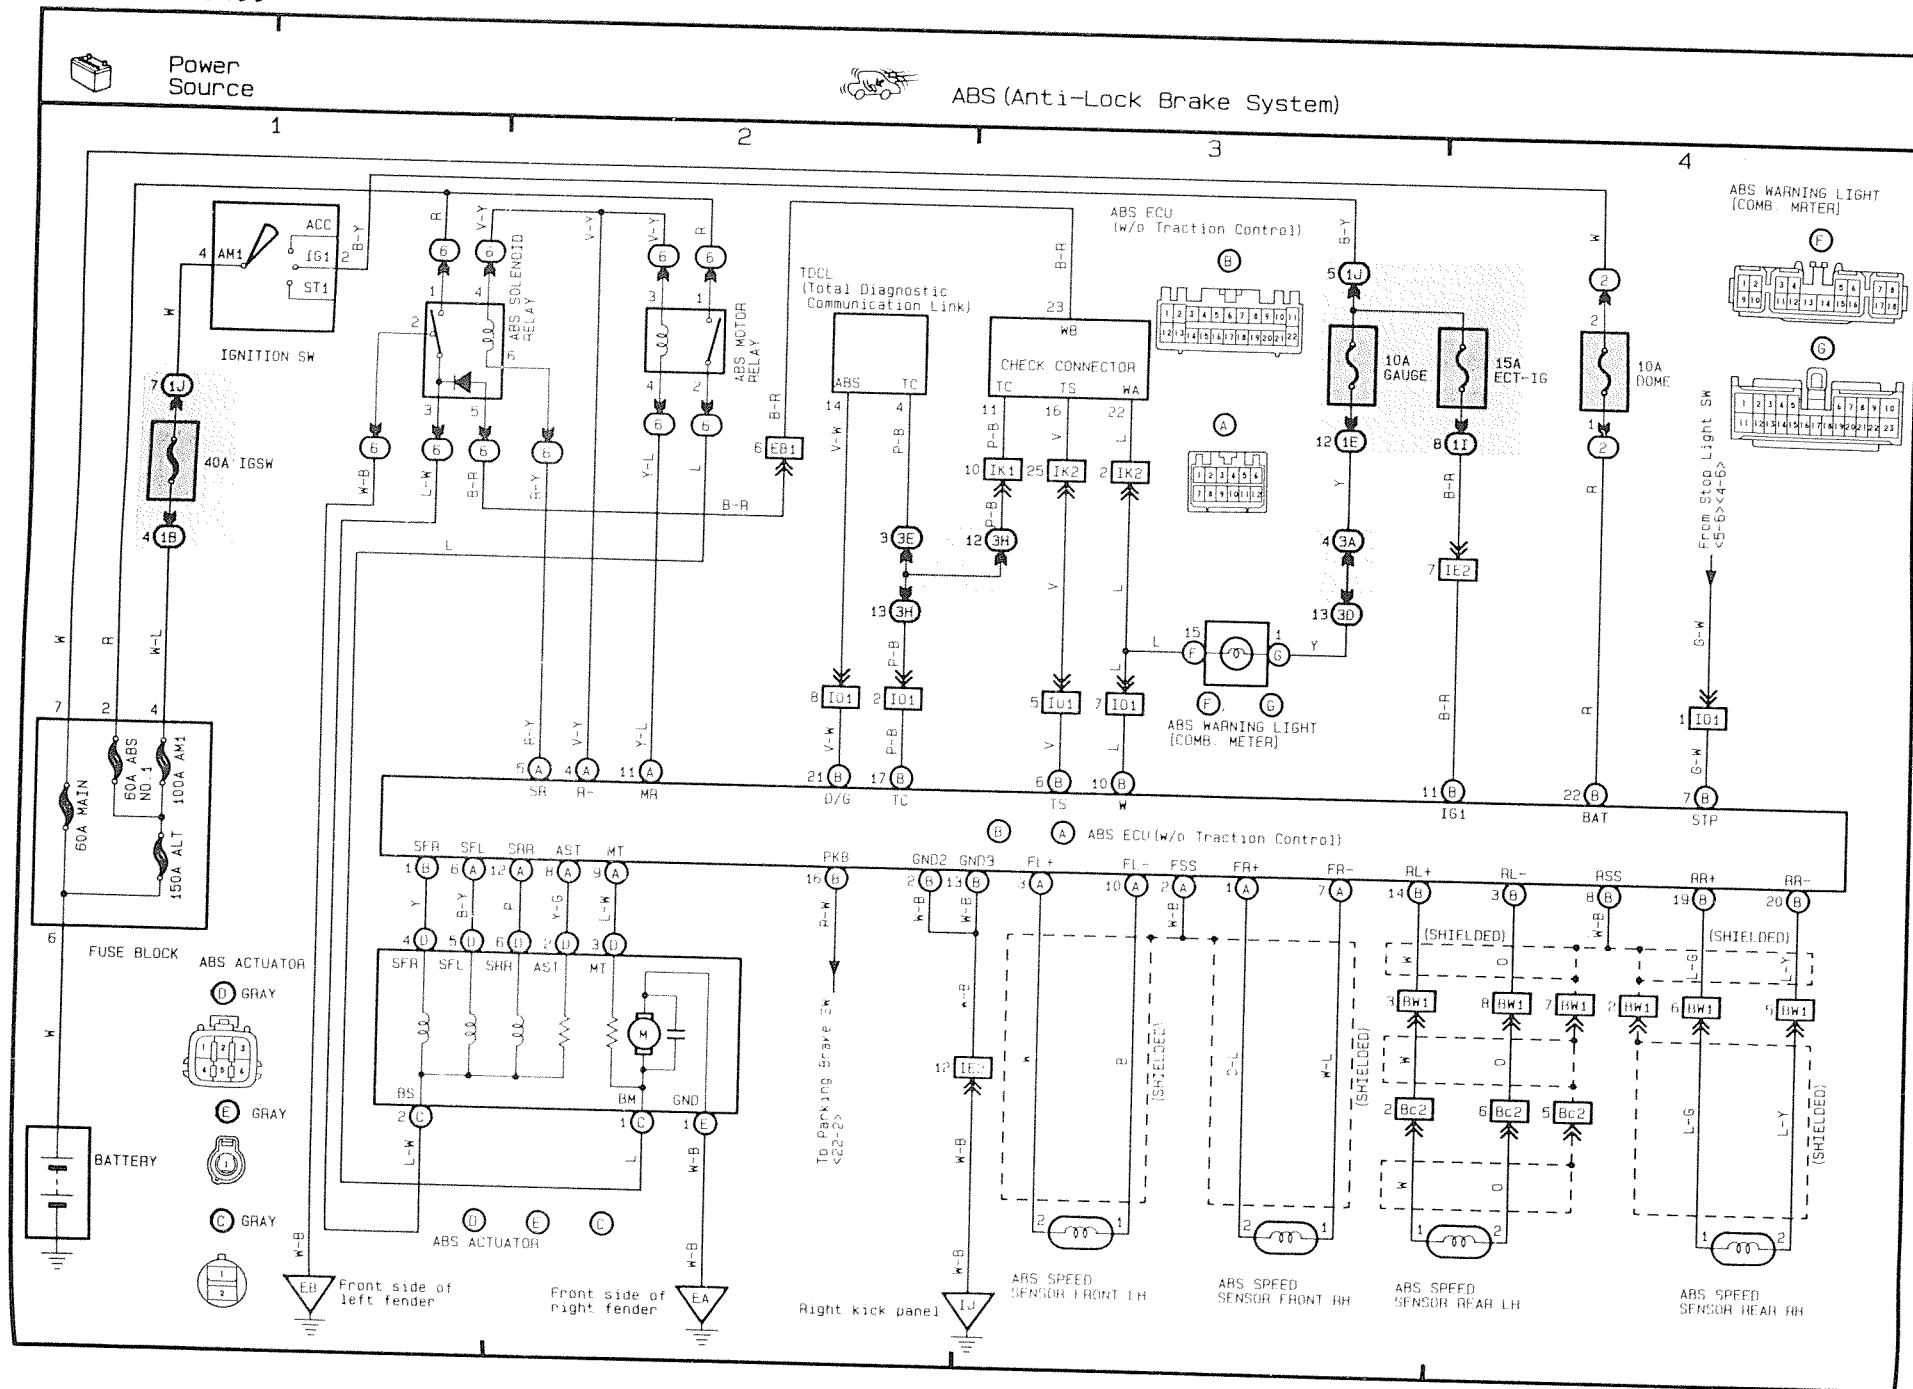


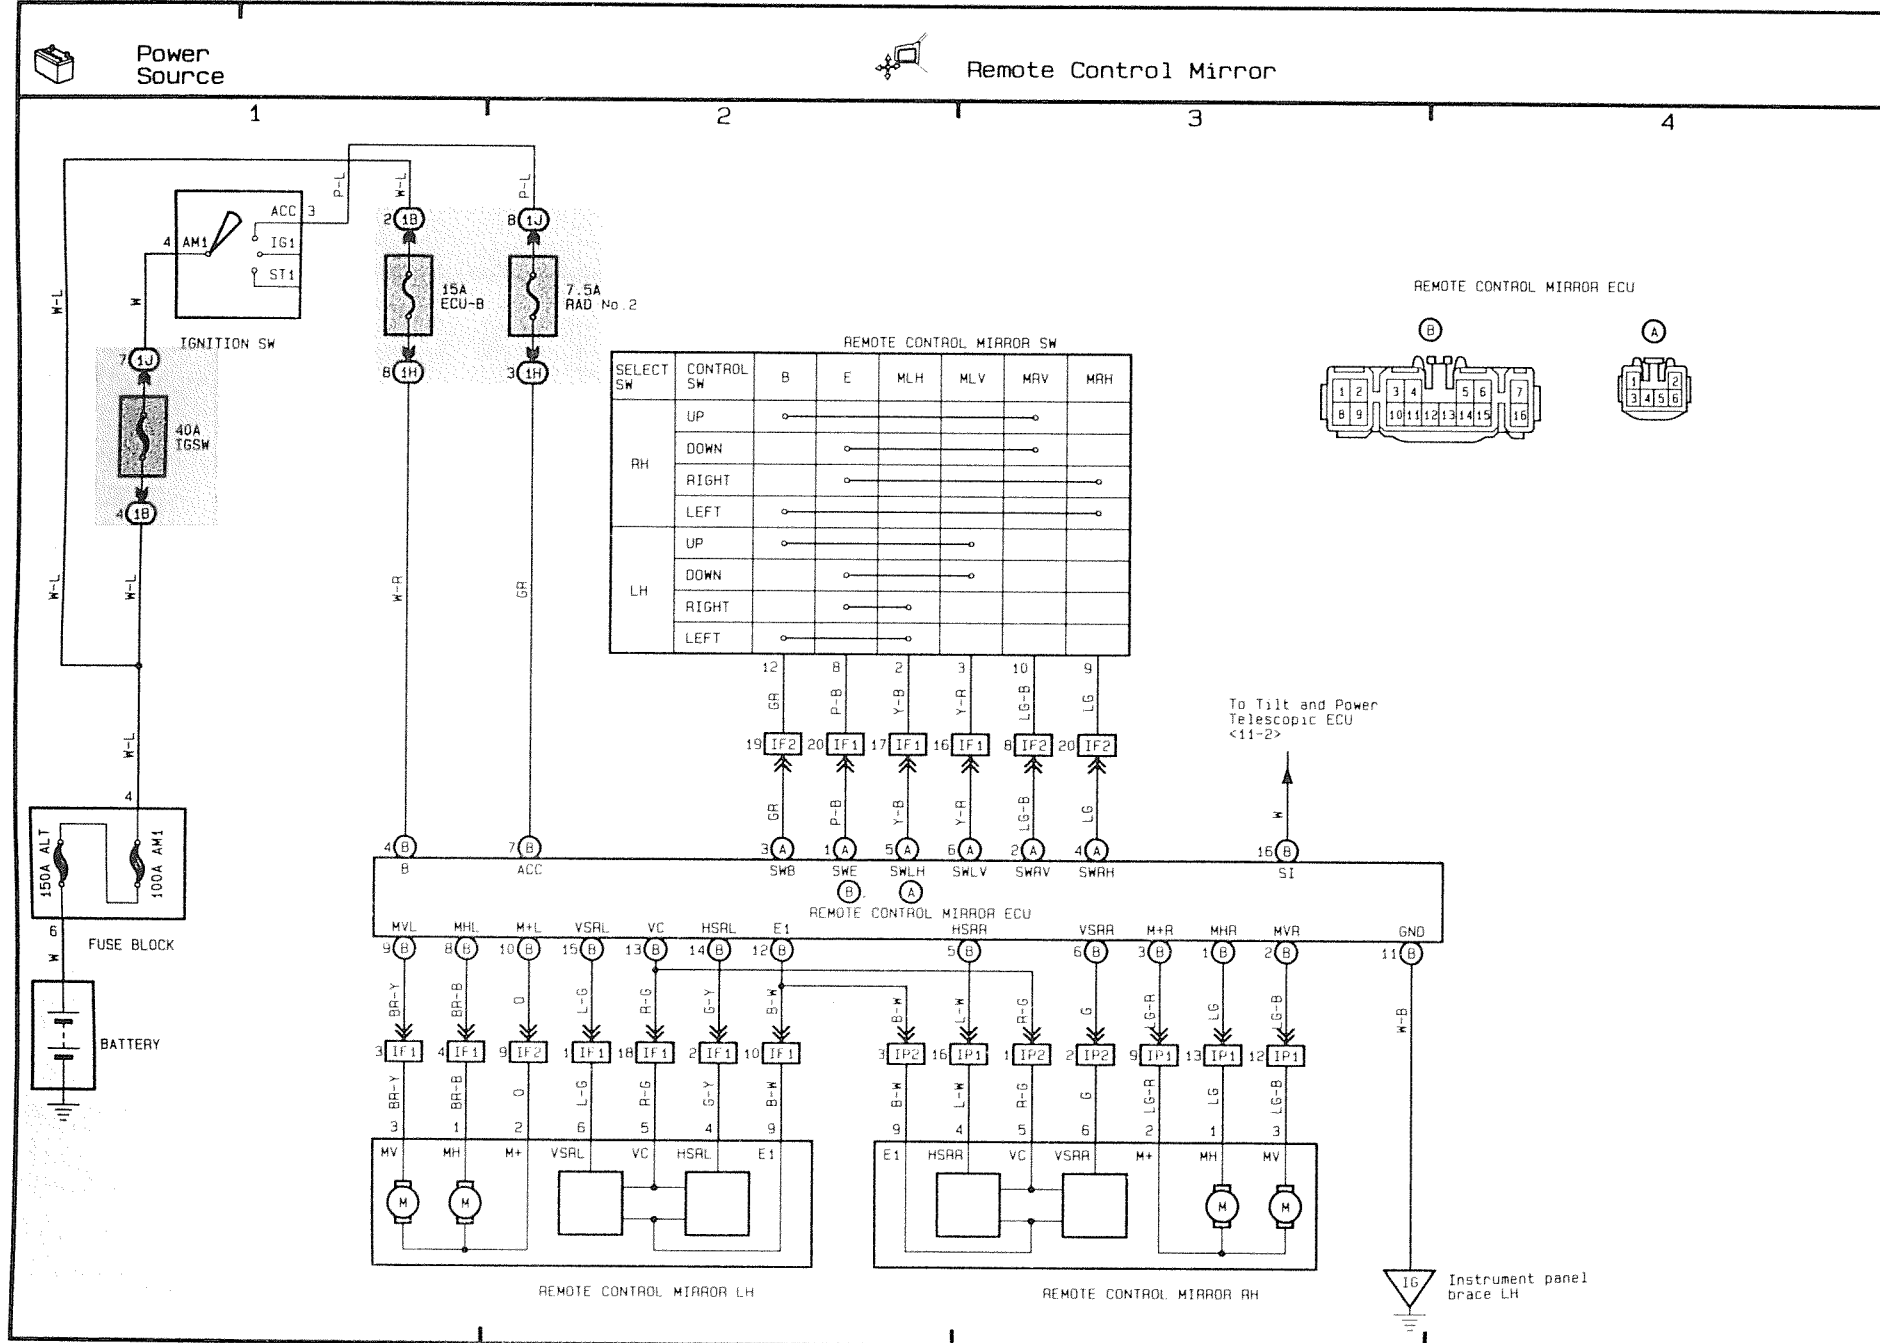


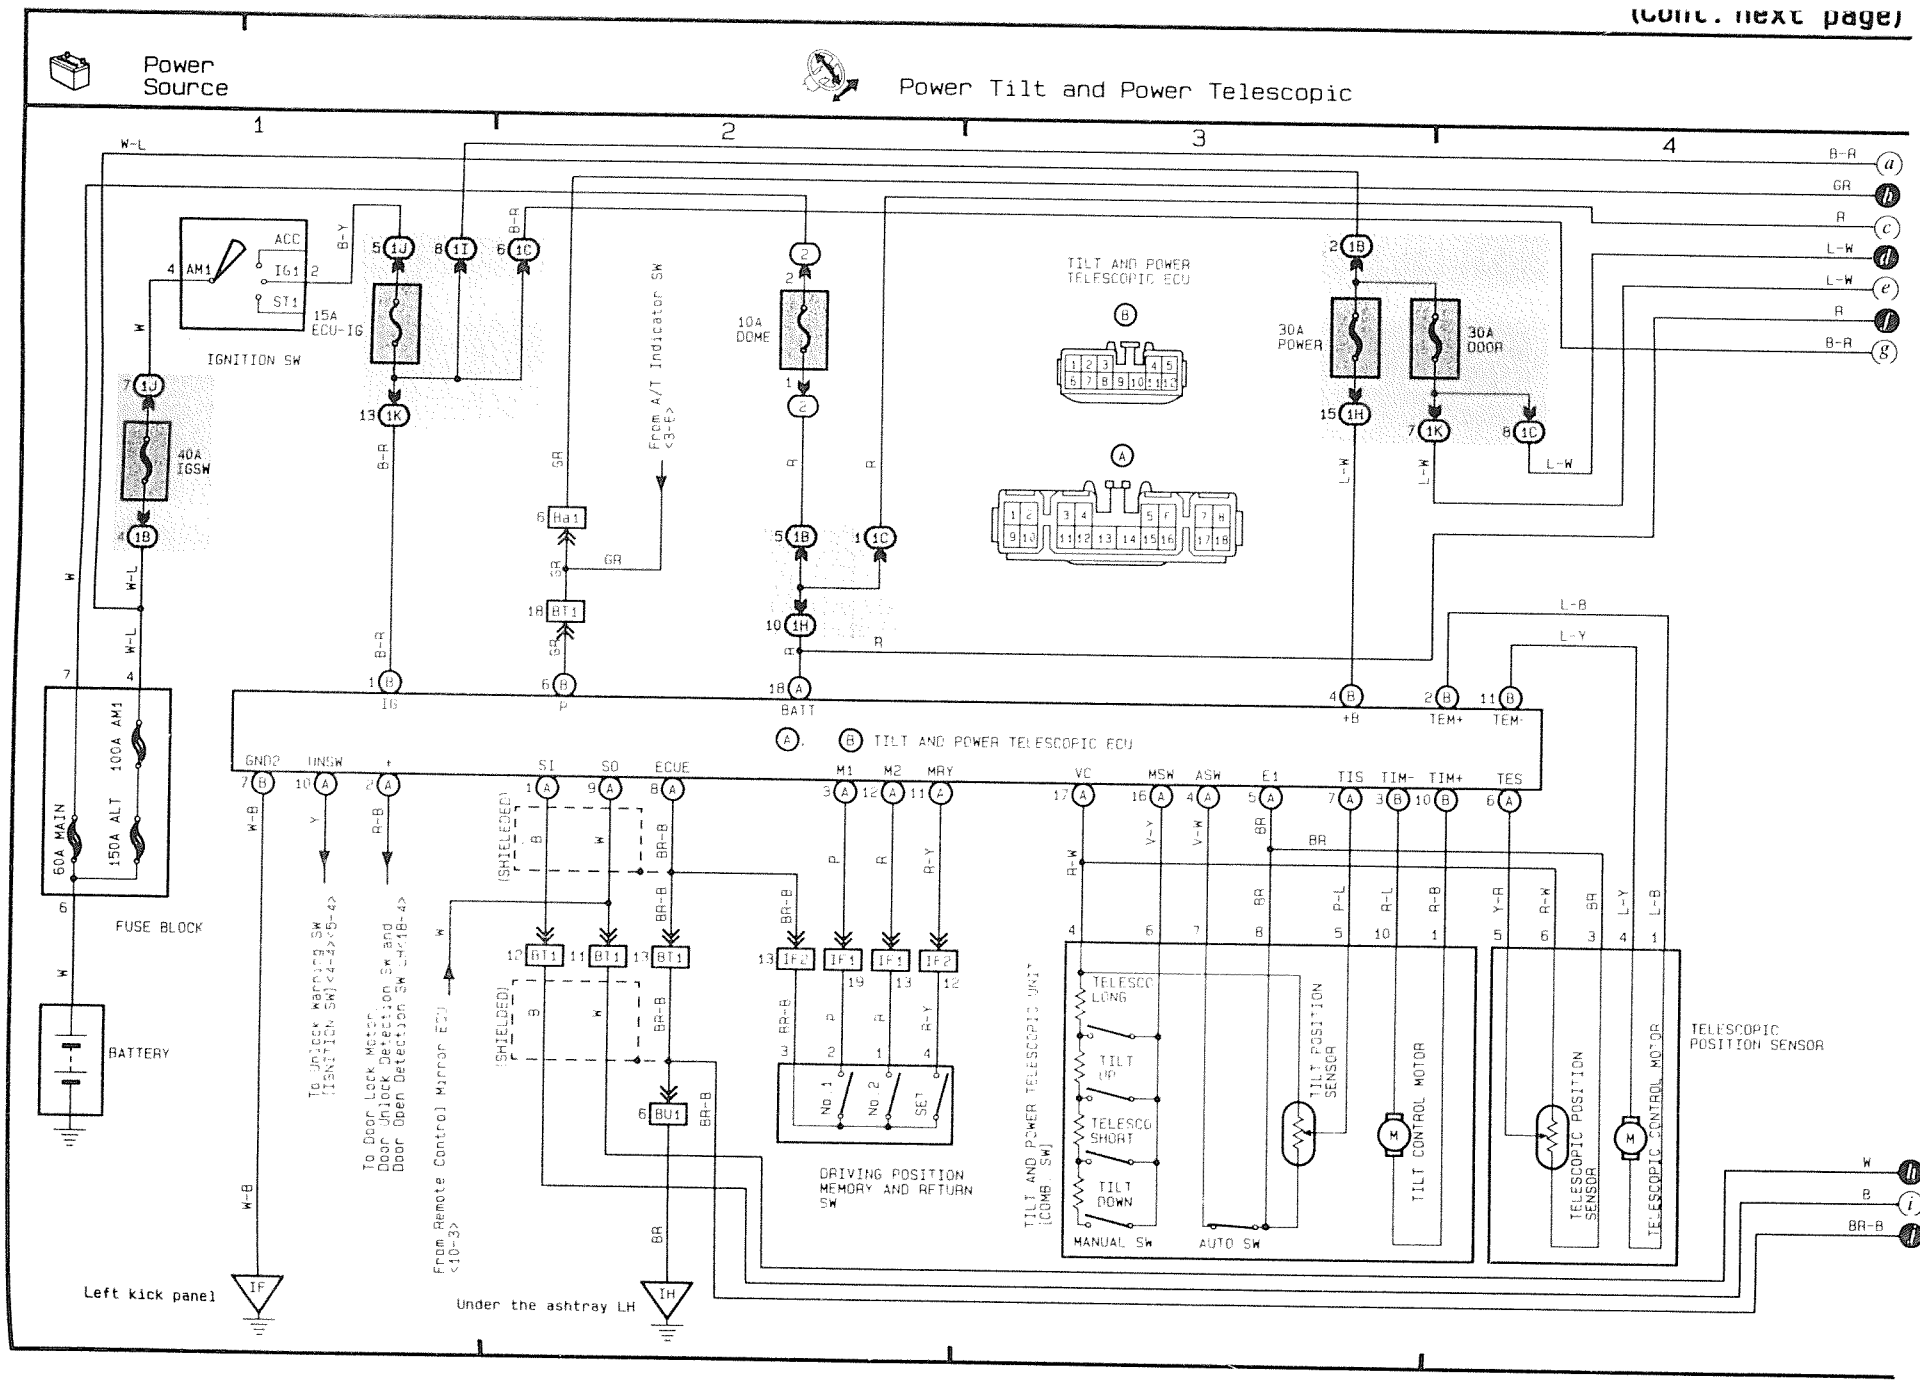





Power Seat (Driver's)

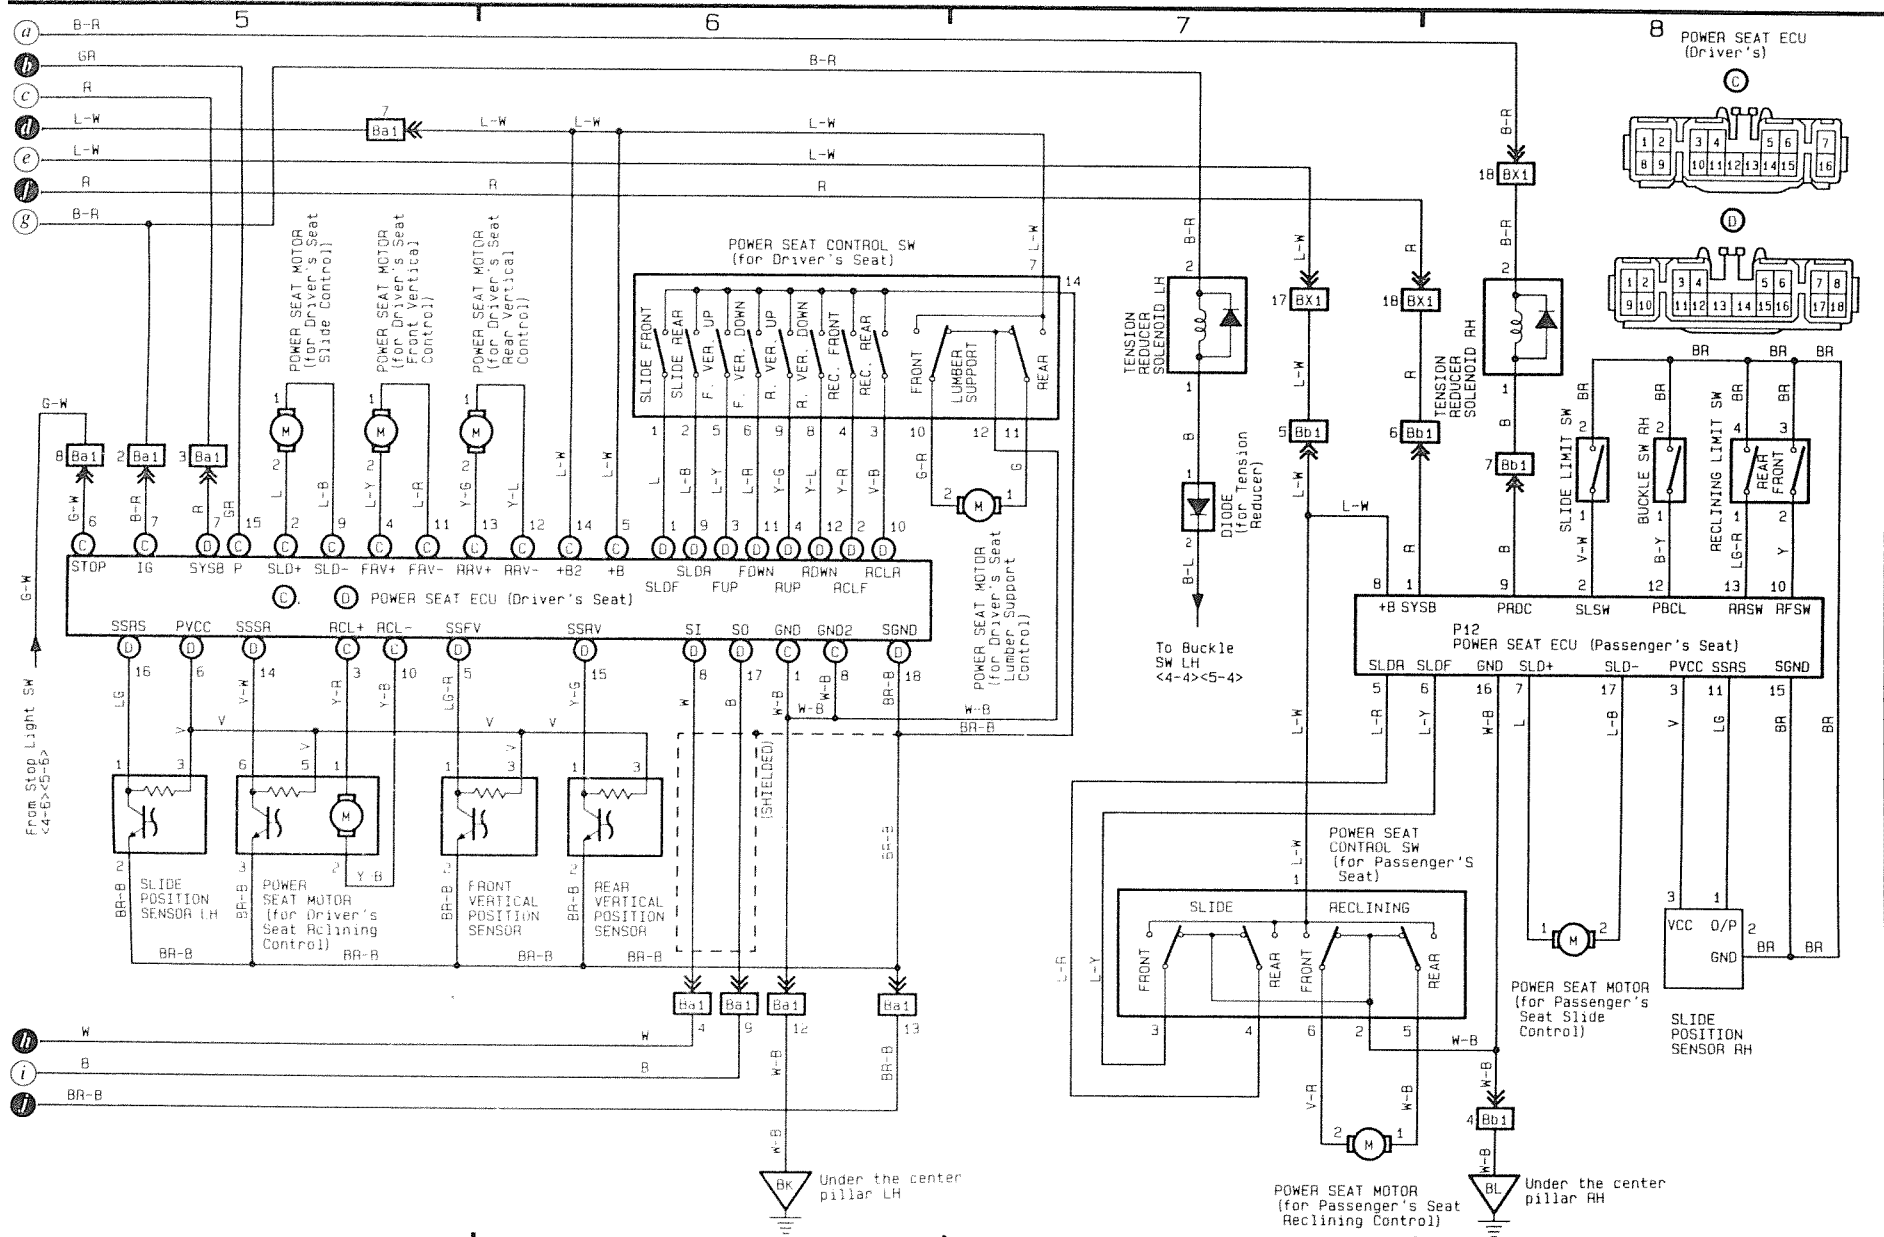Power Seat (Passenger's) and
Electric Tension Reducer

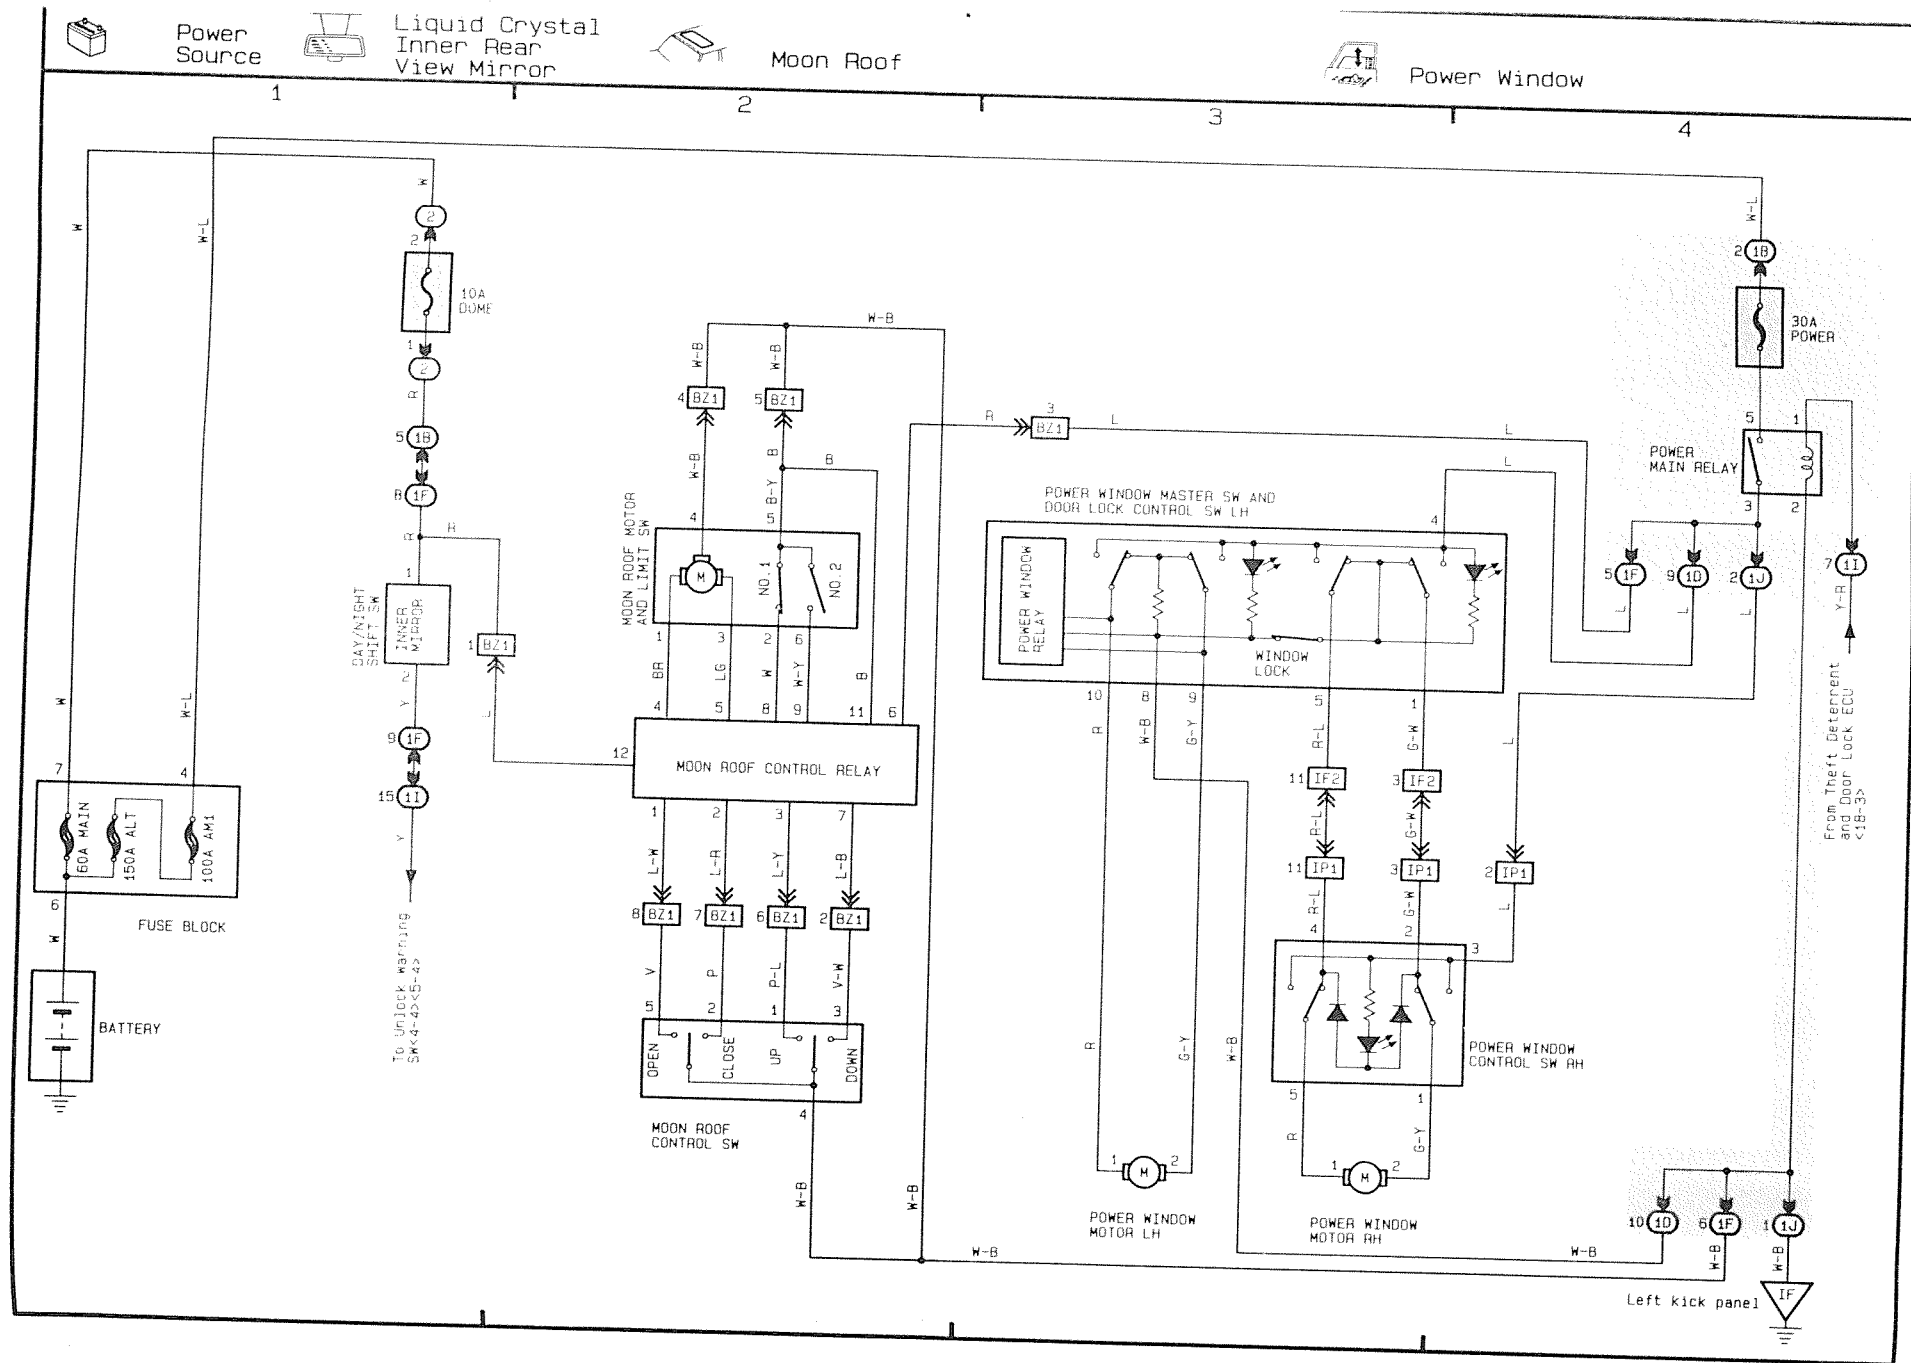


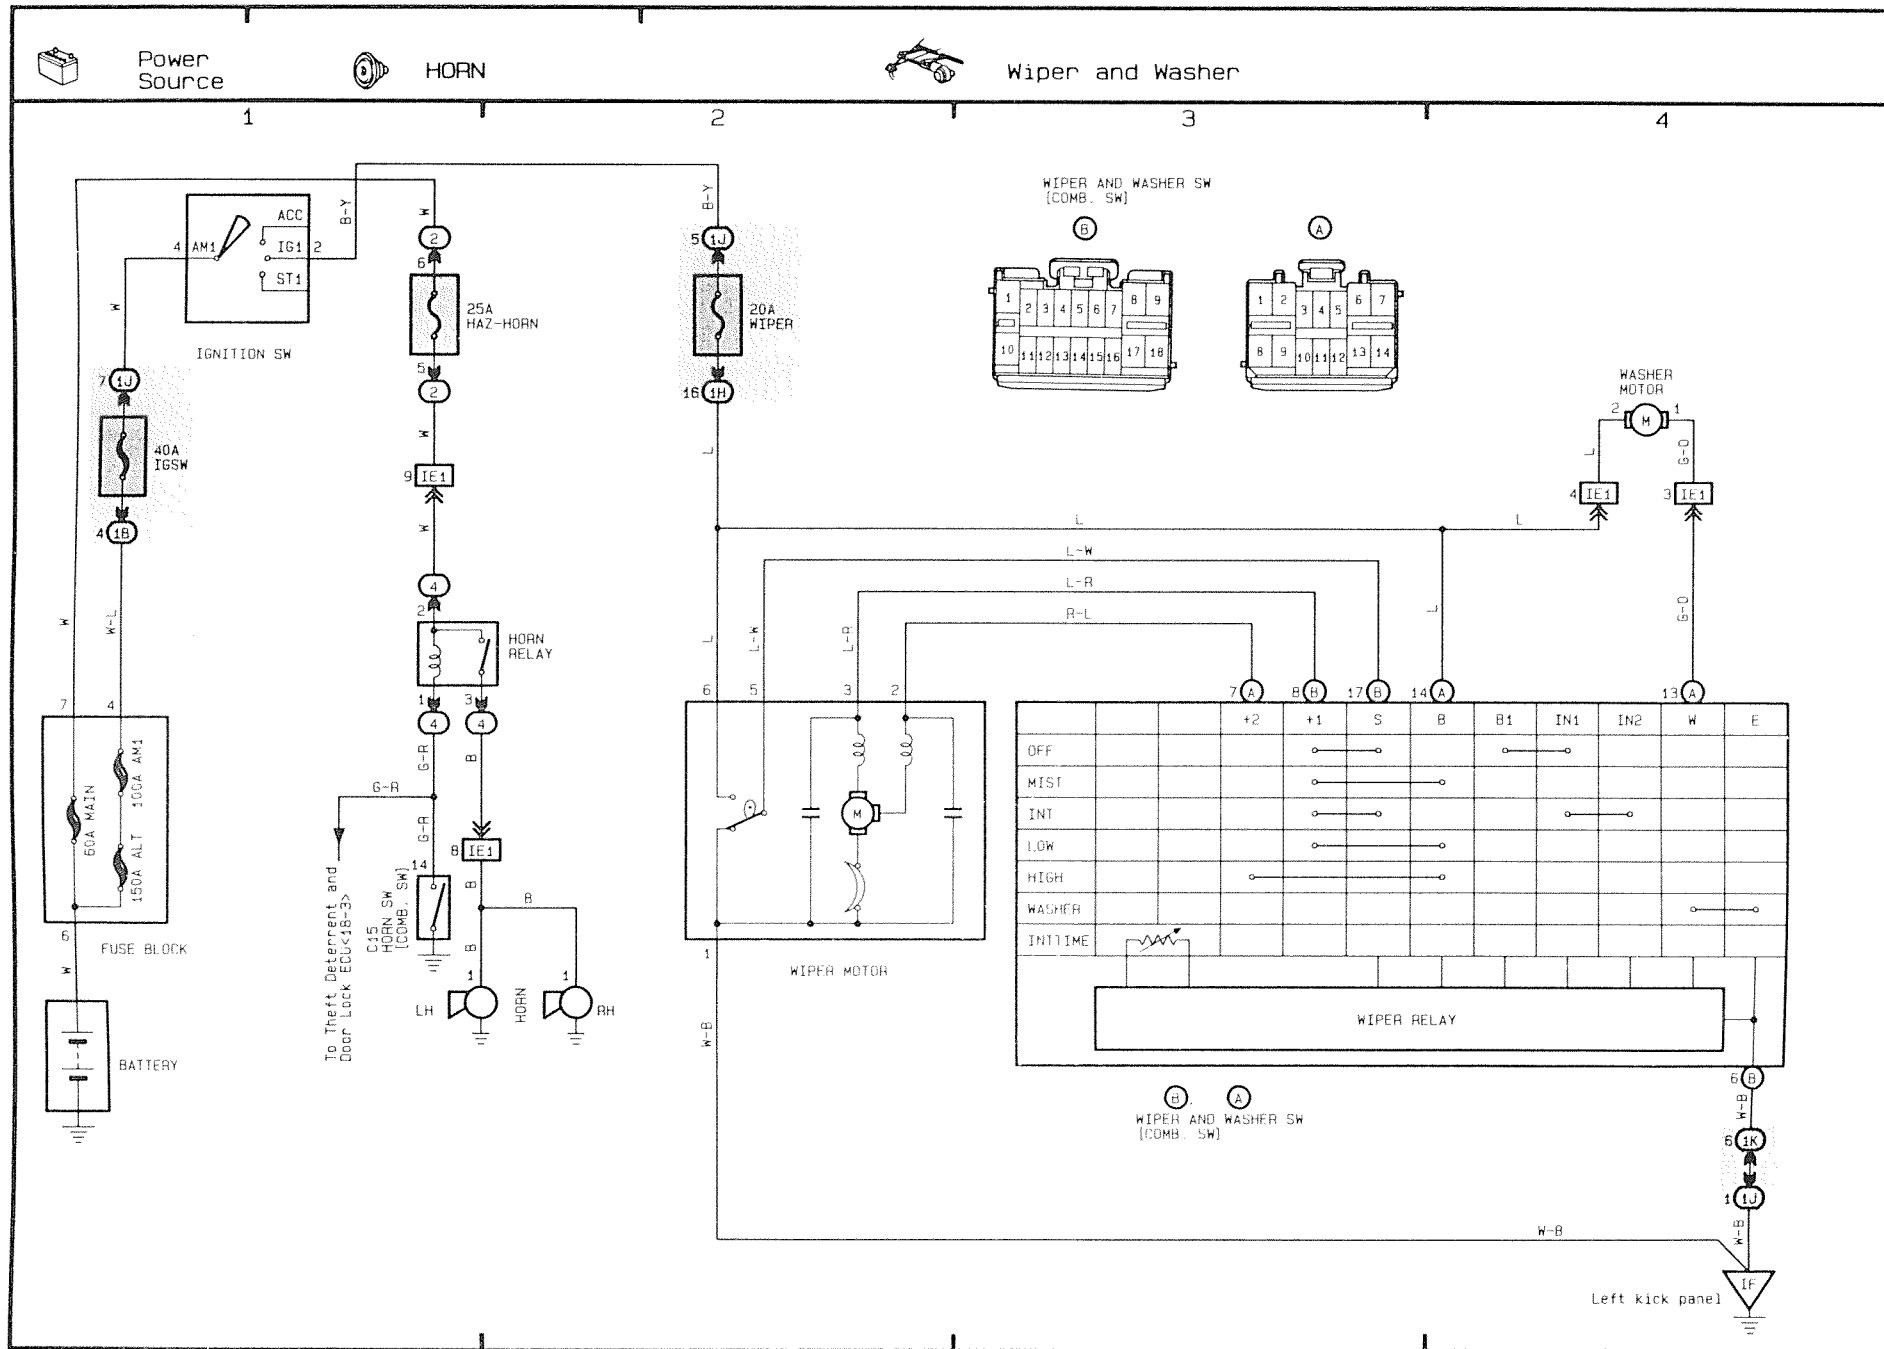


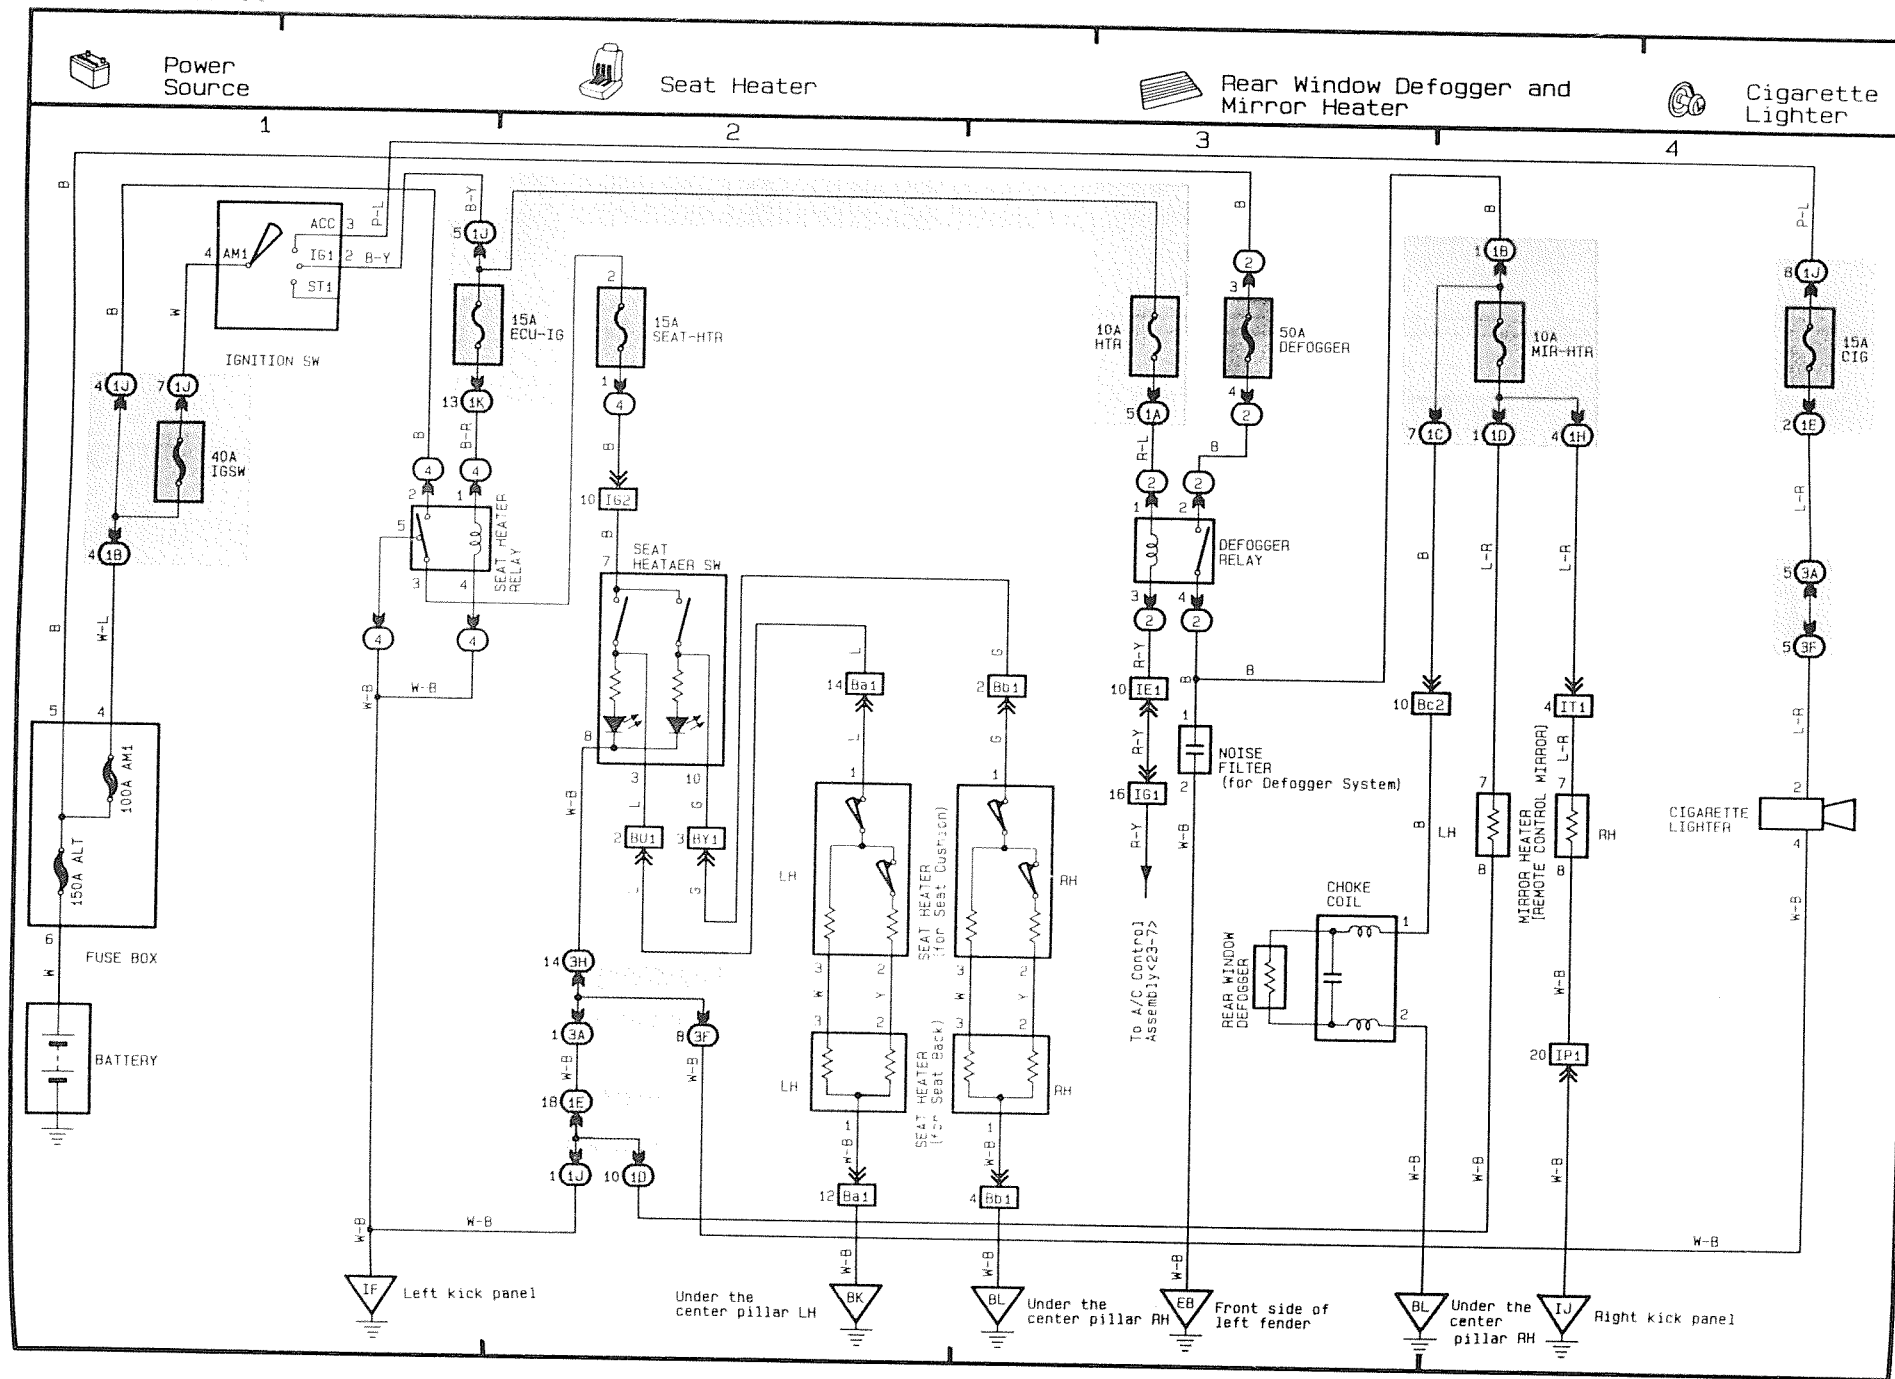





SRS Airbag

 


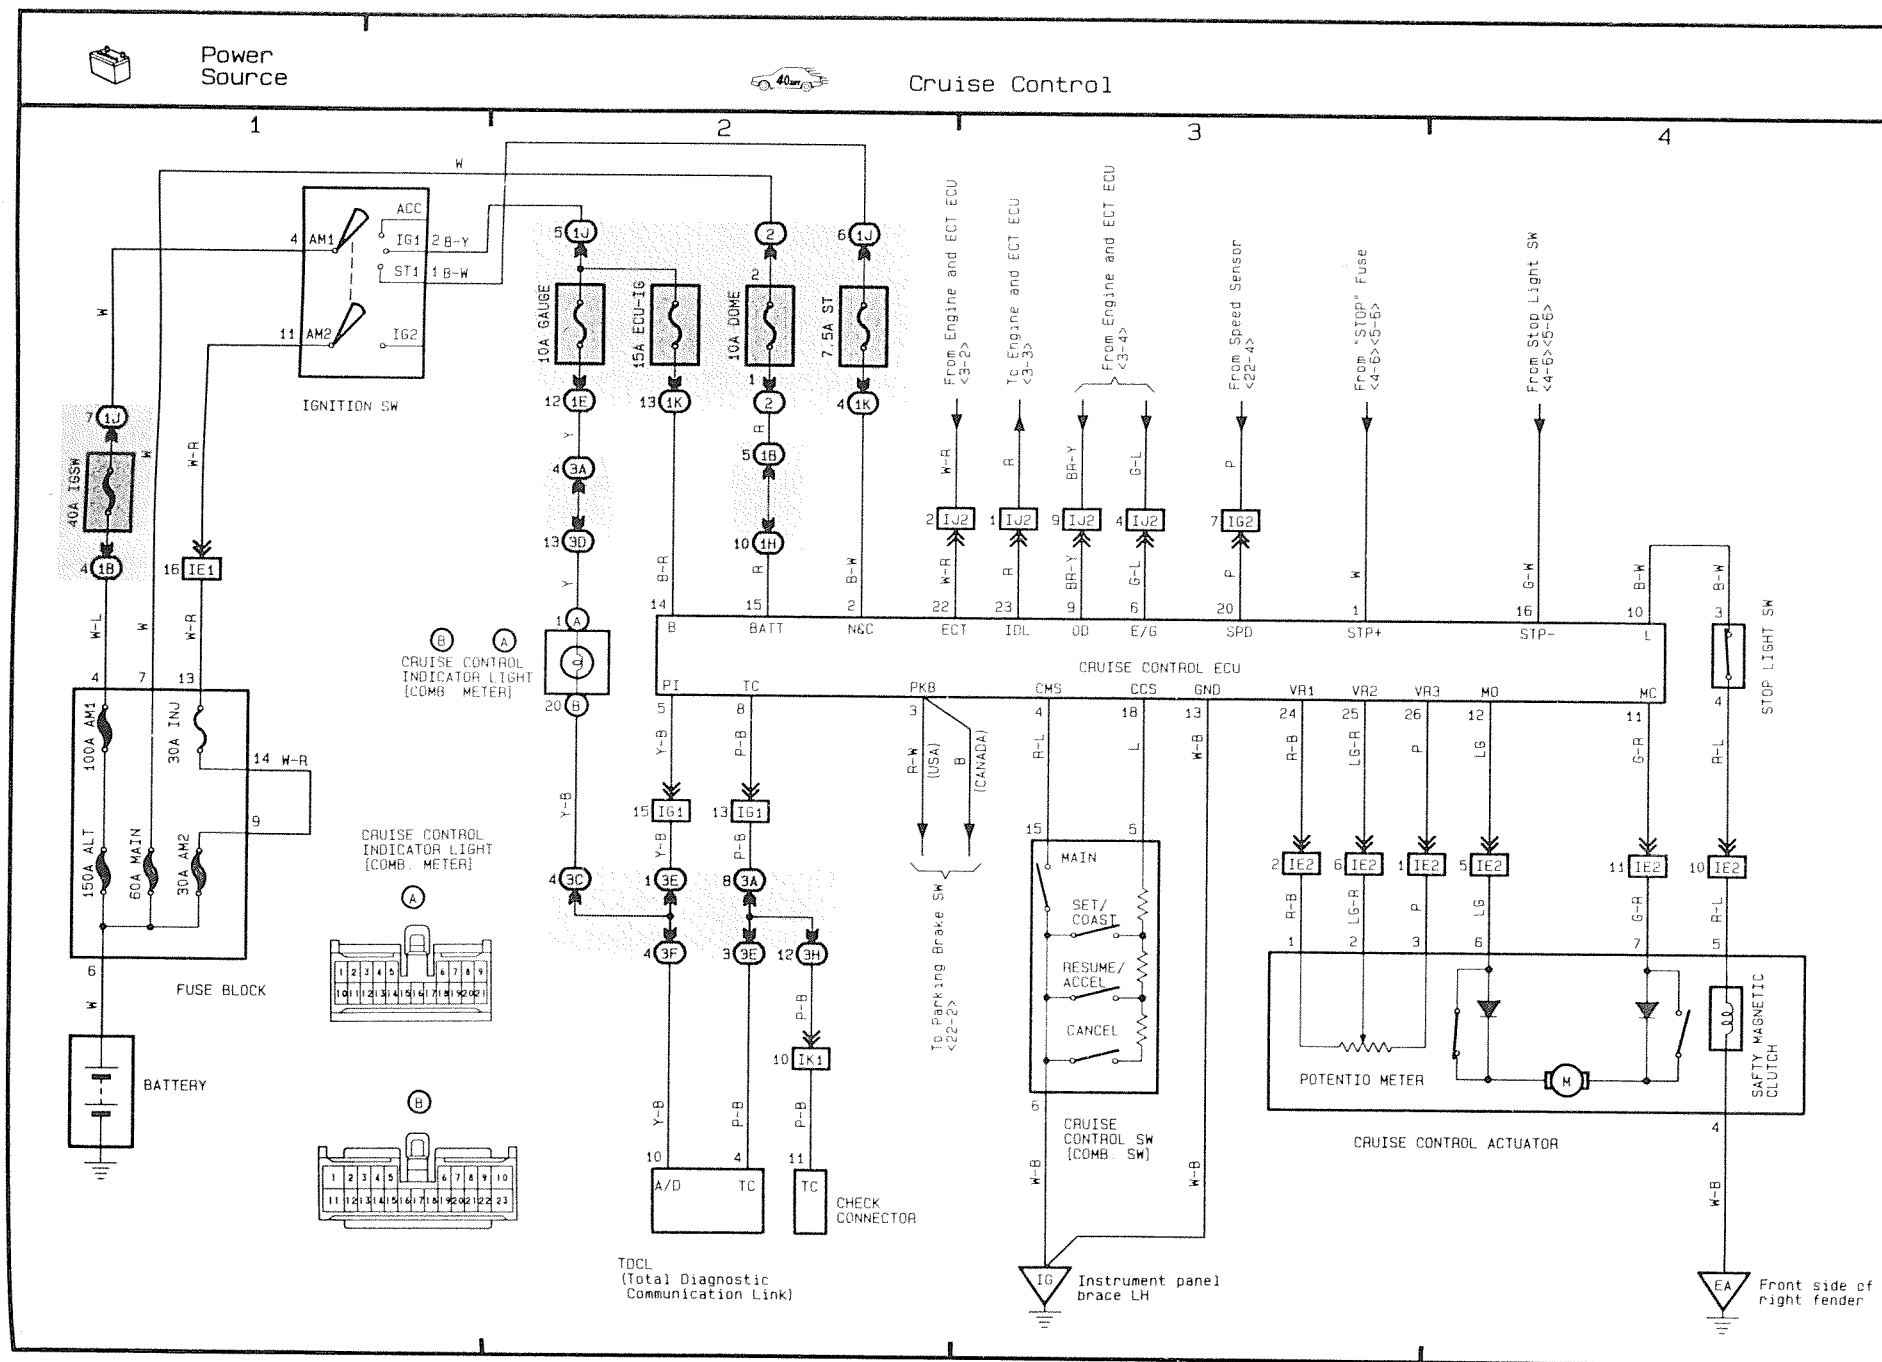


 


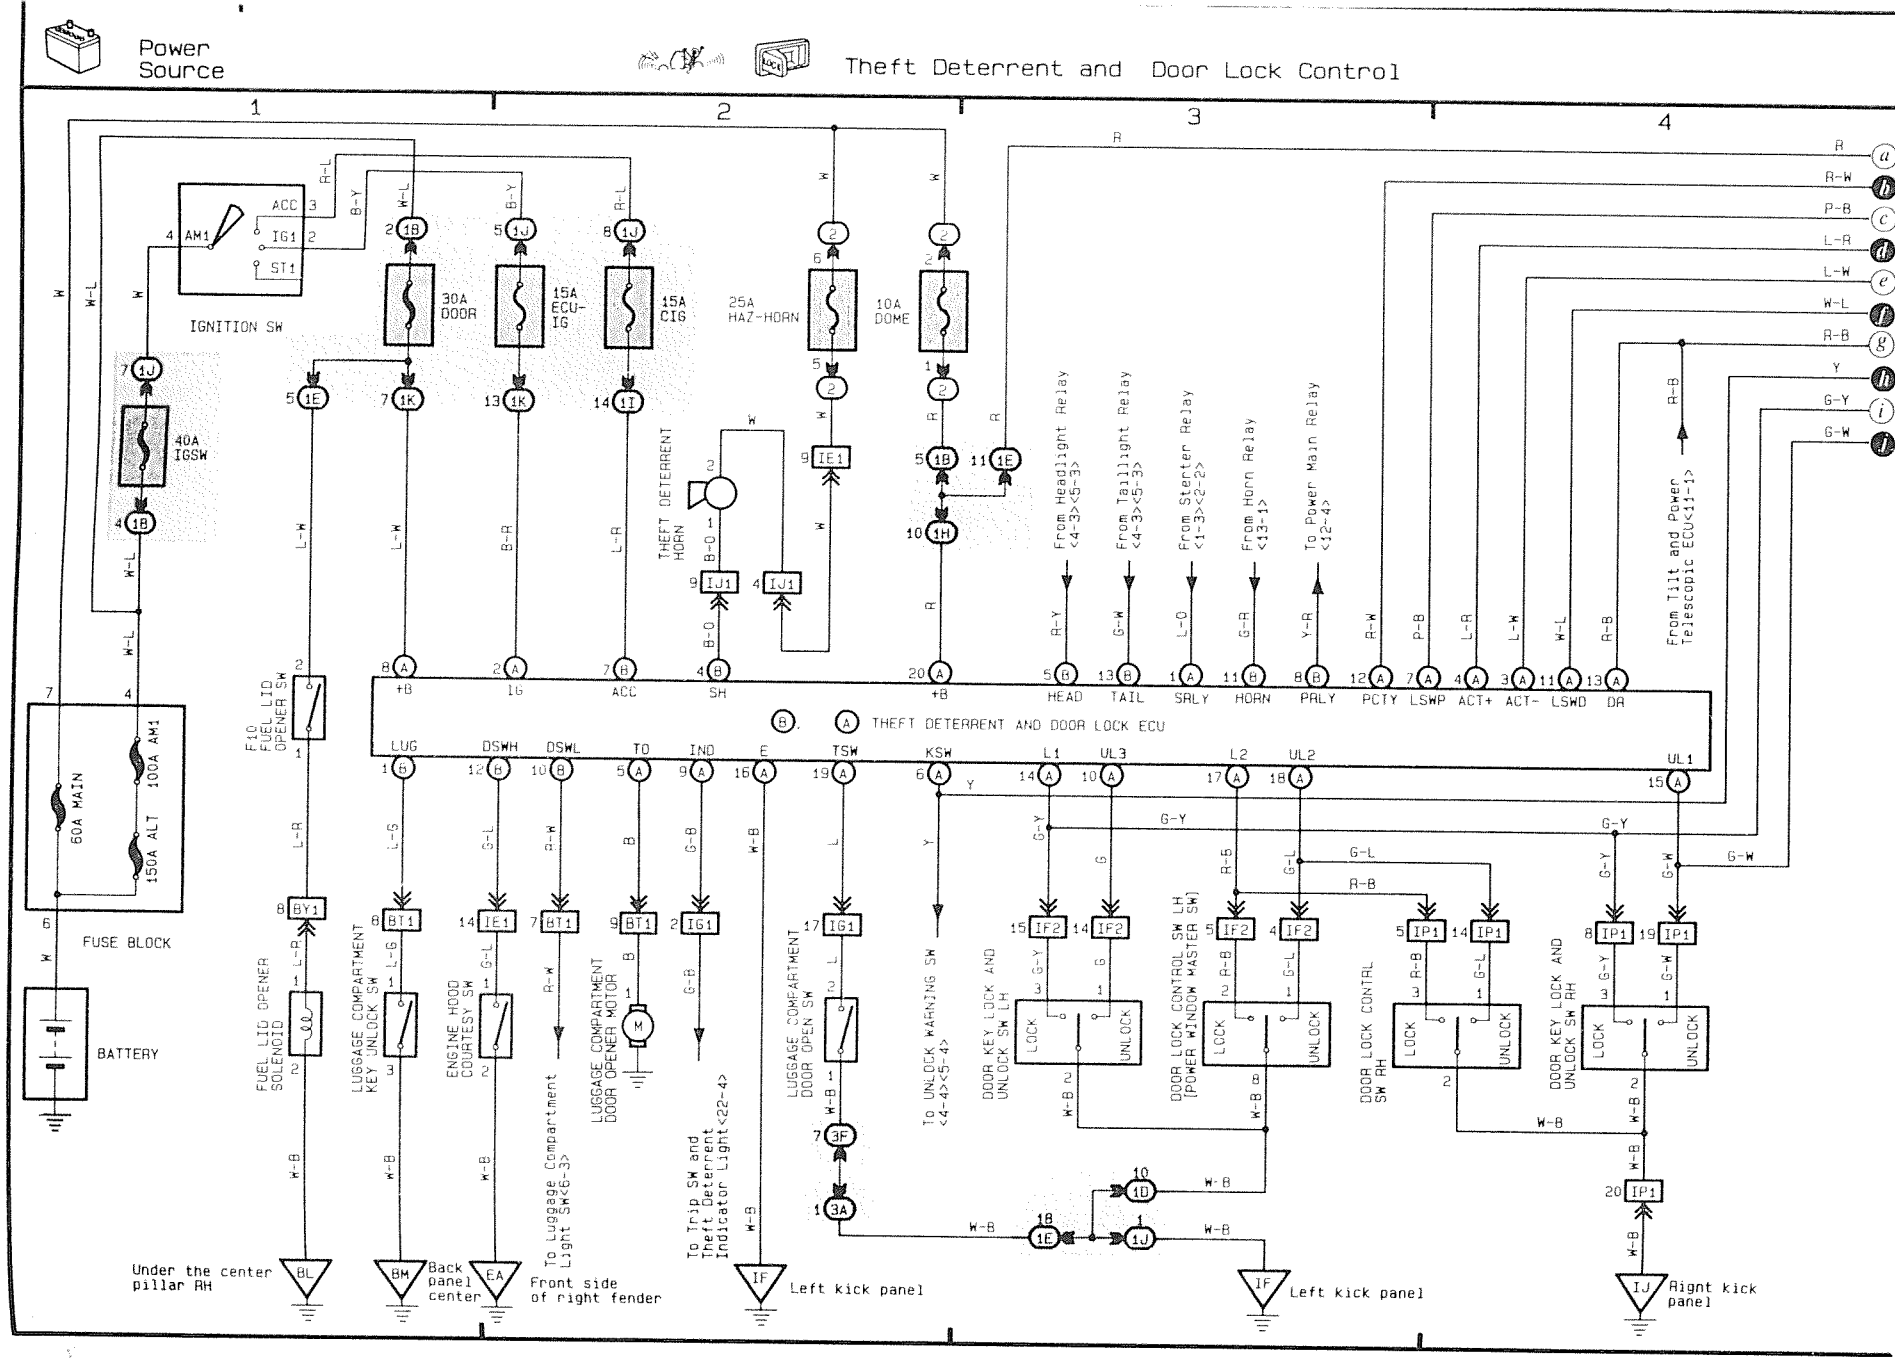



EW/D-31

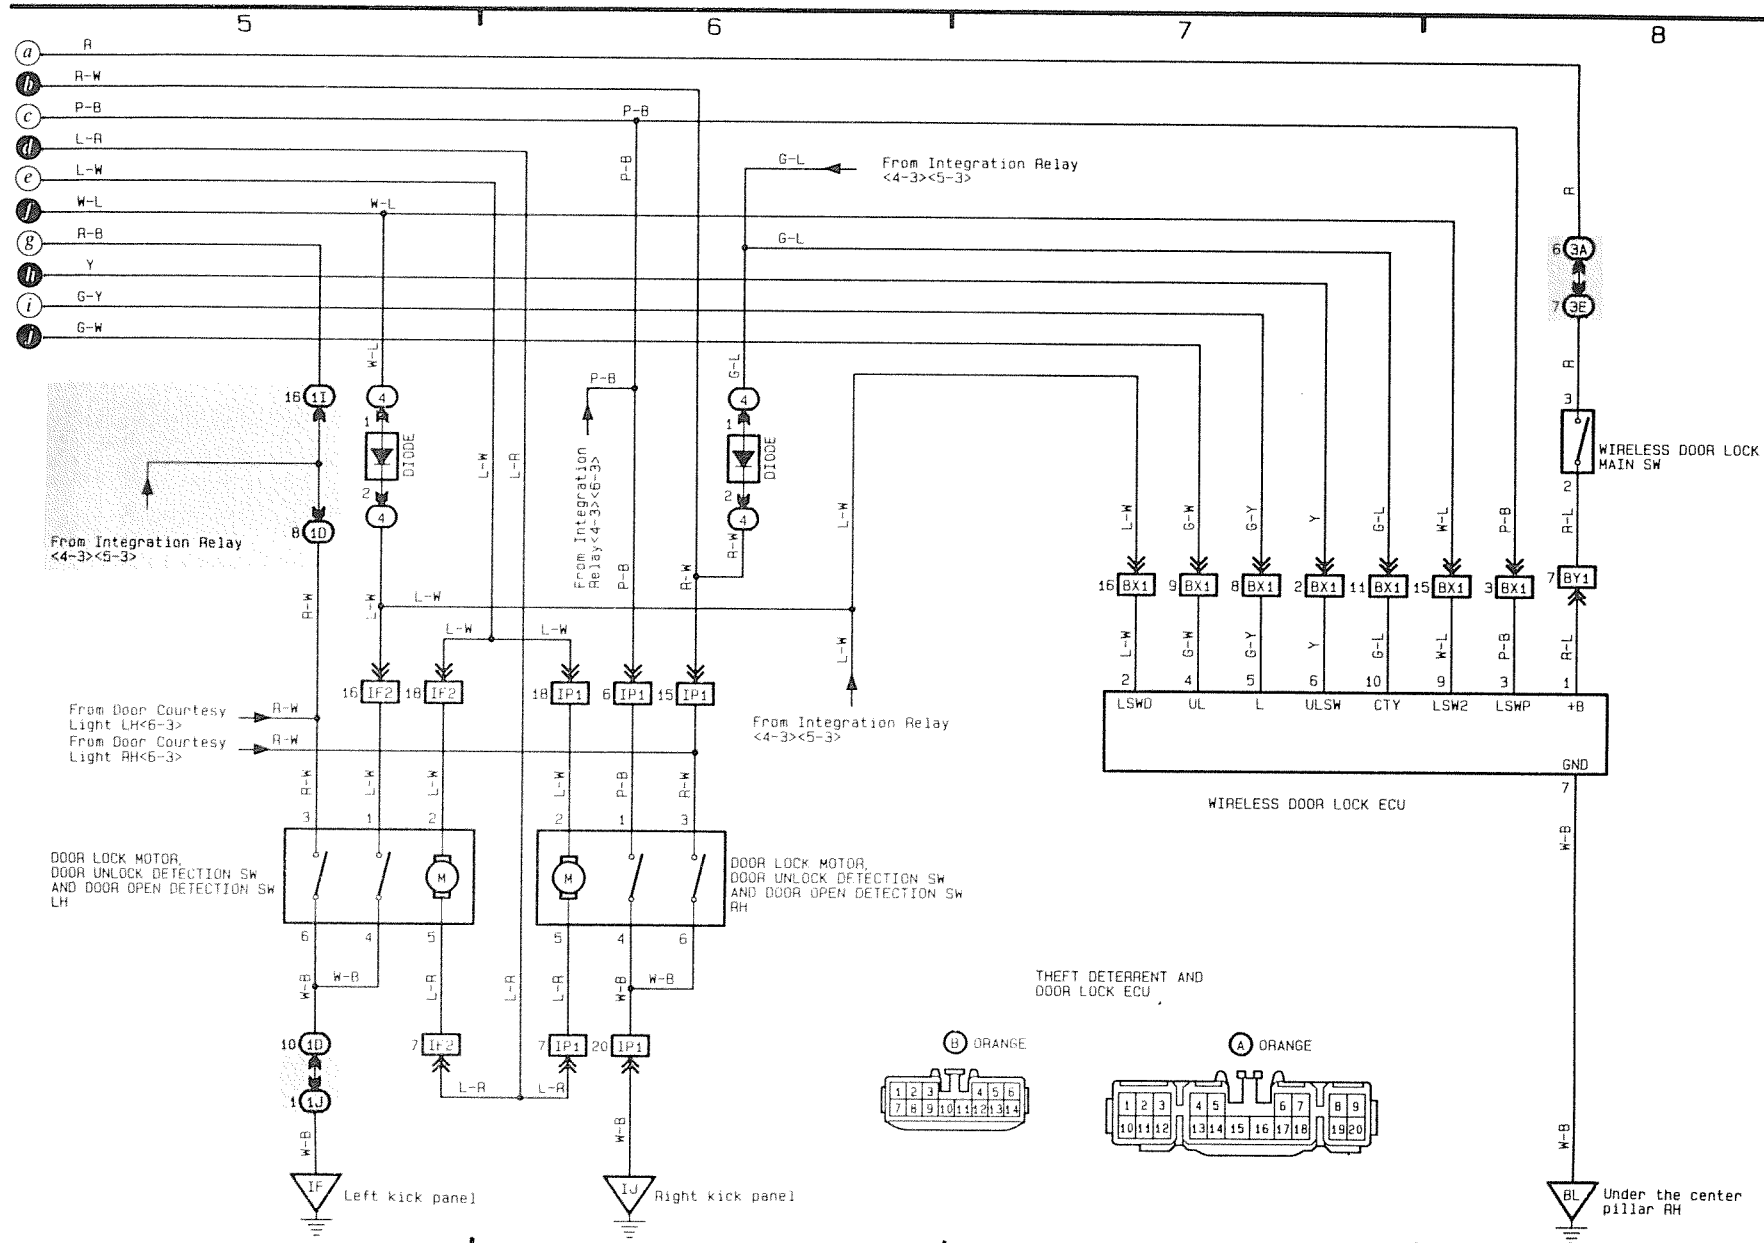


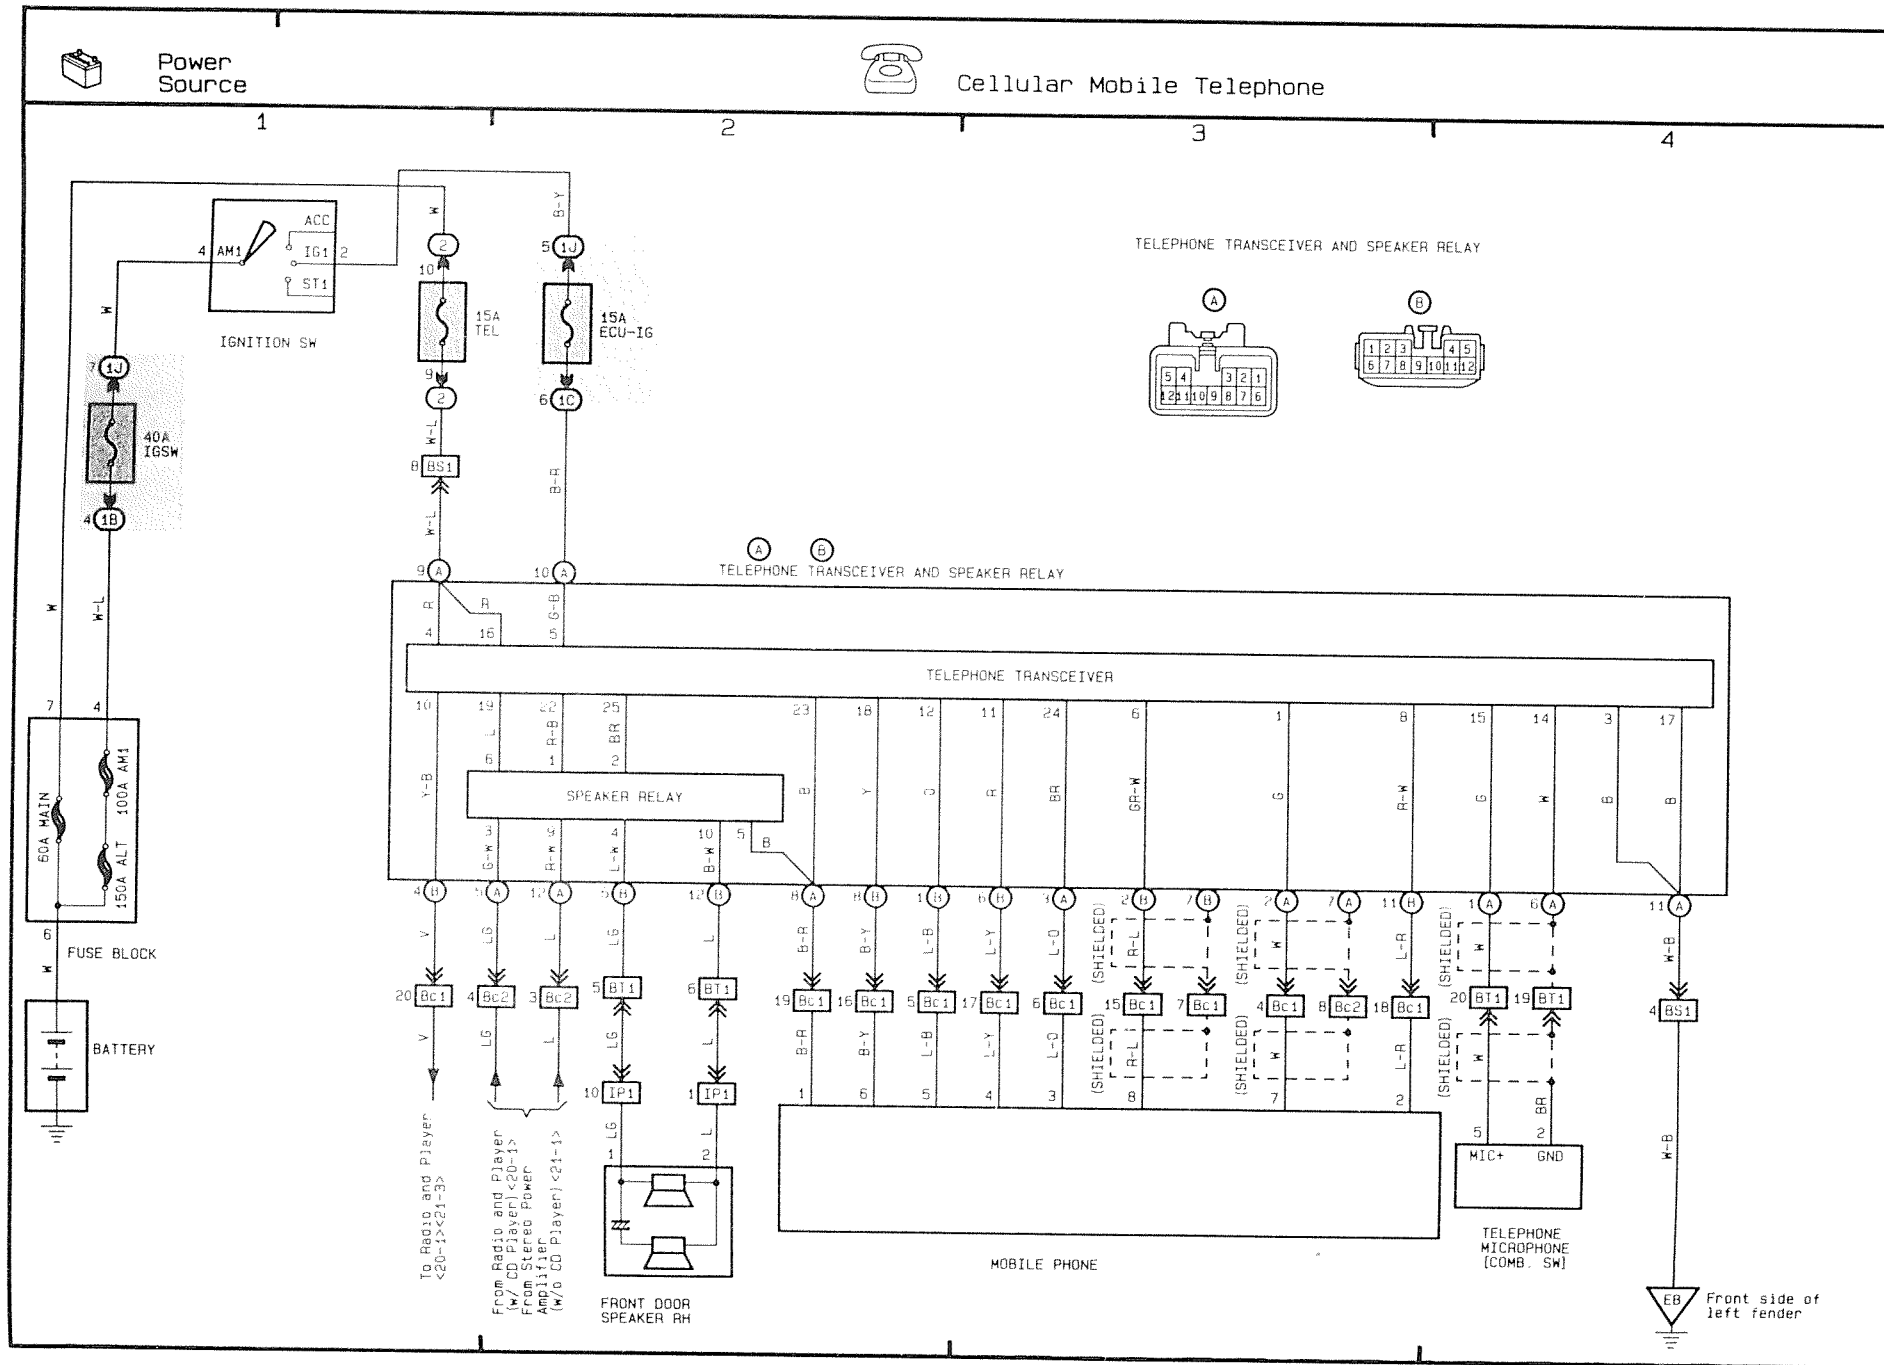


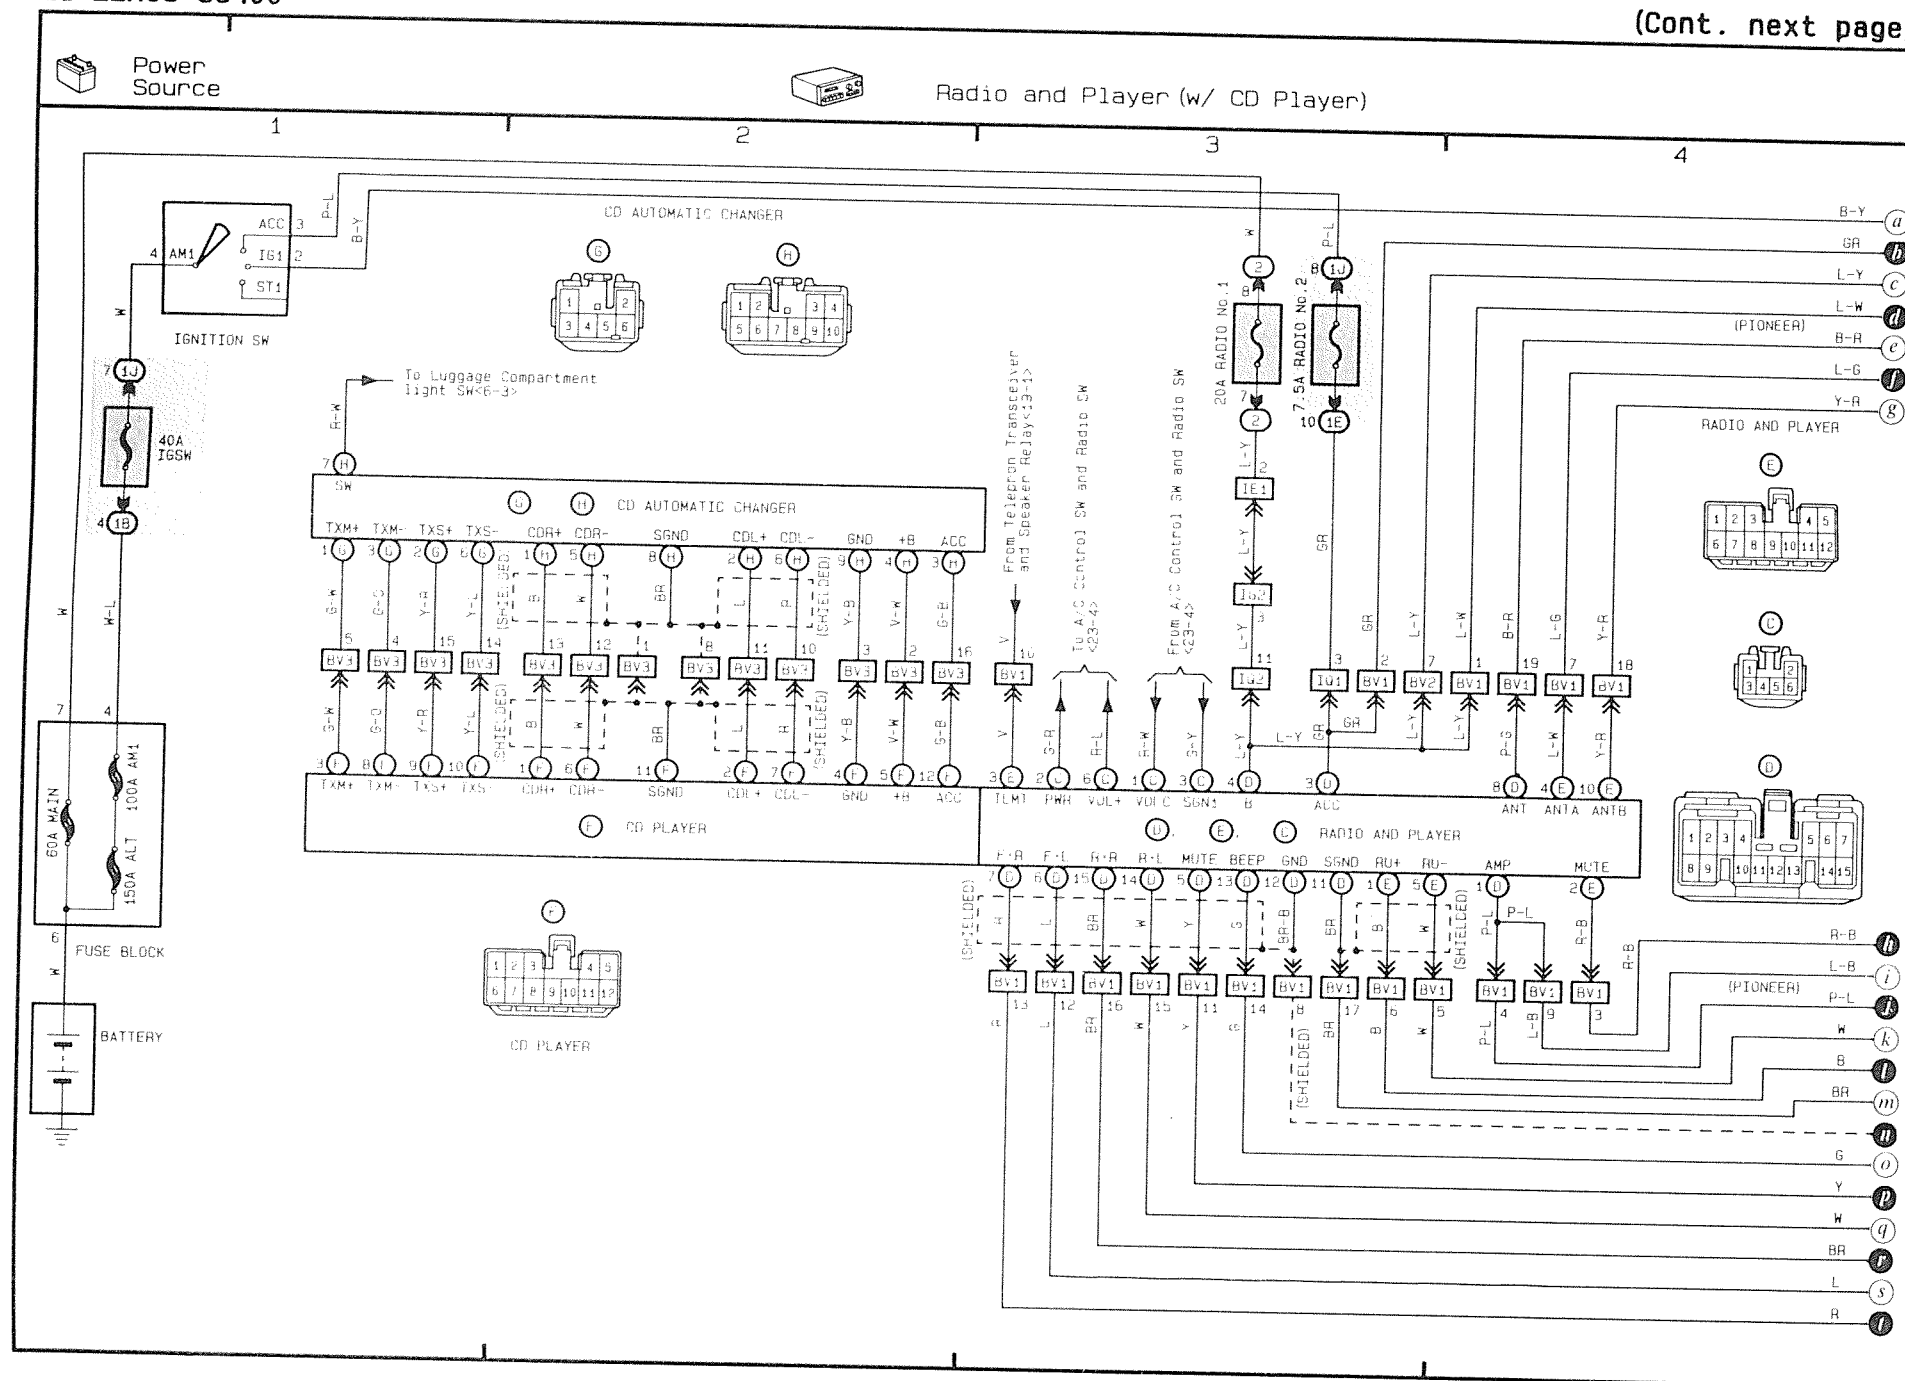

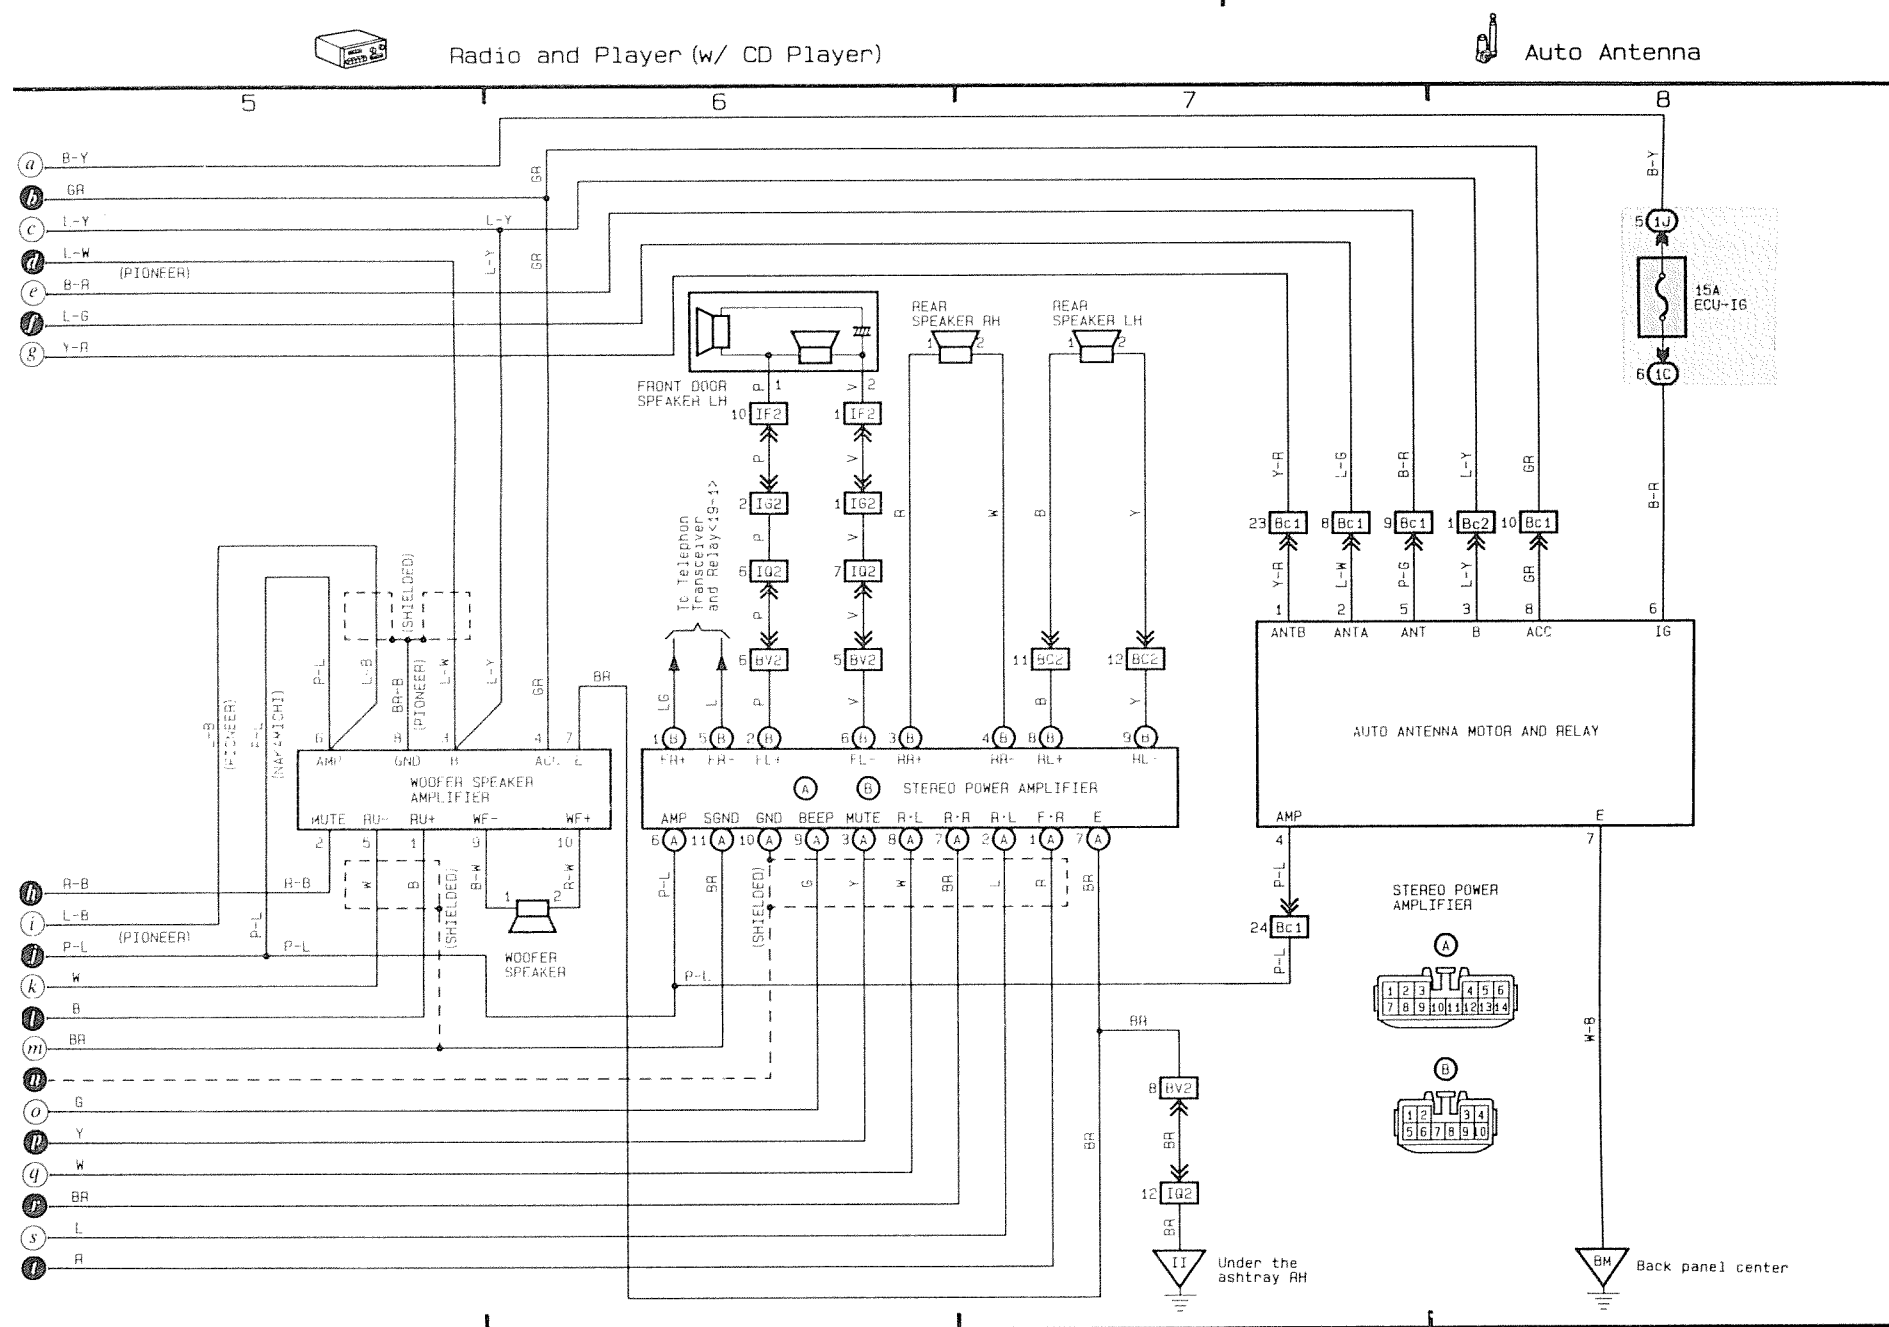

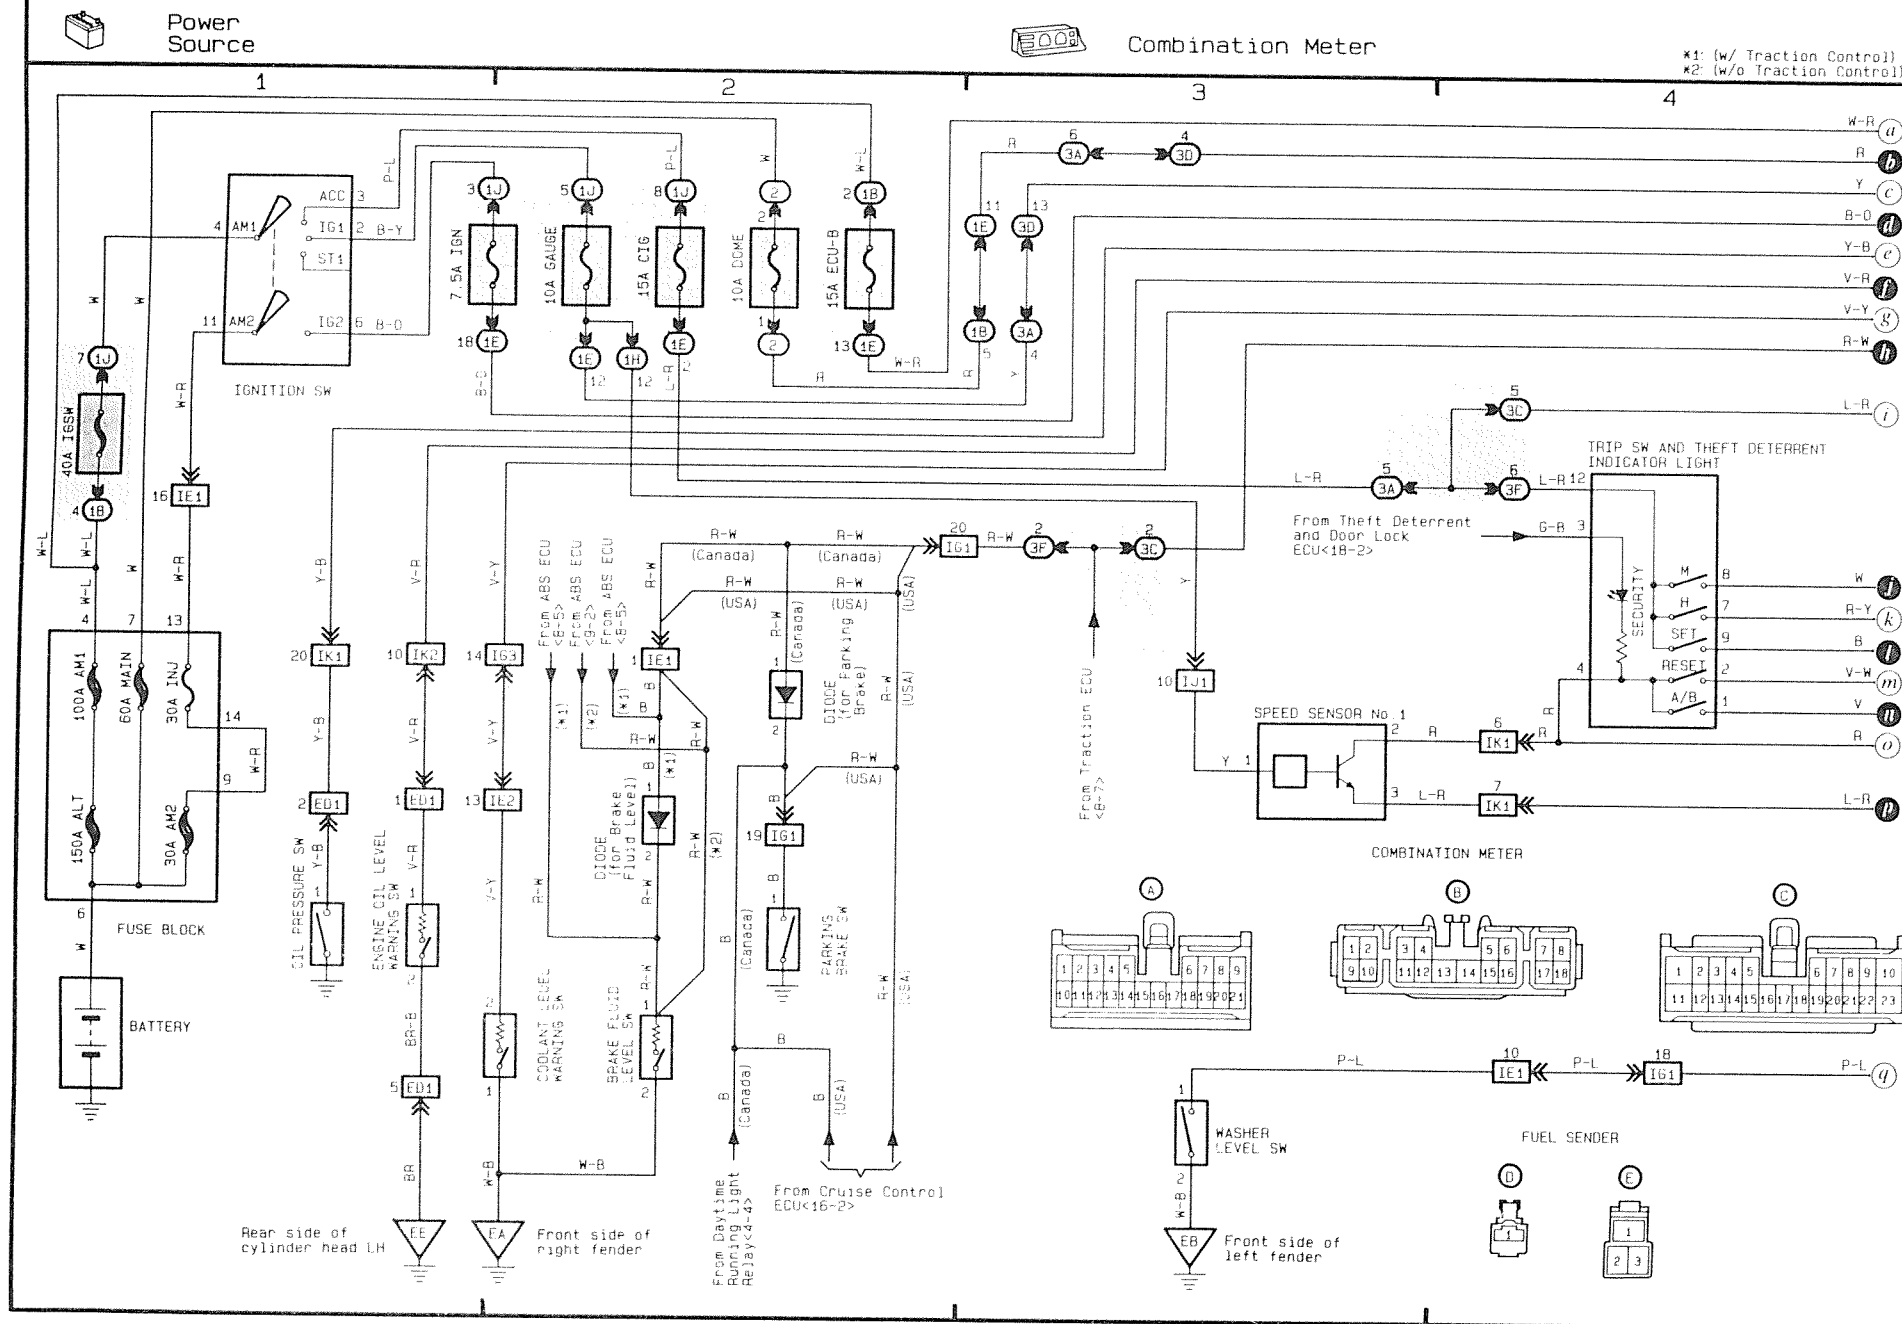


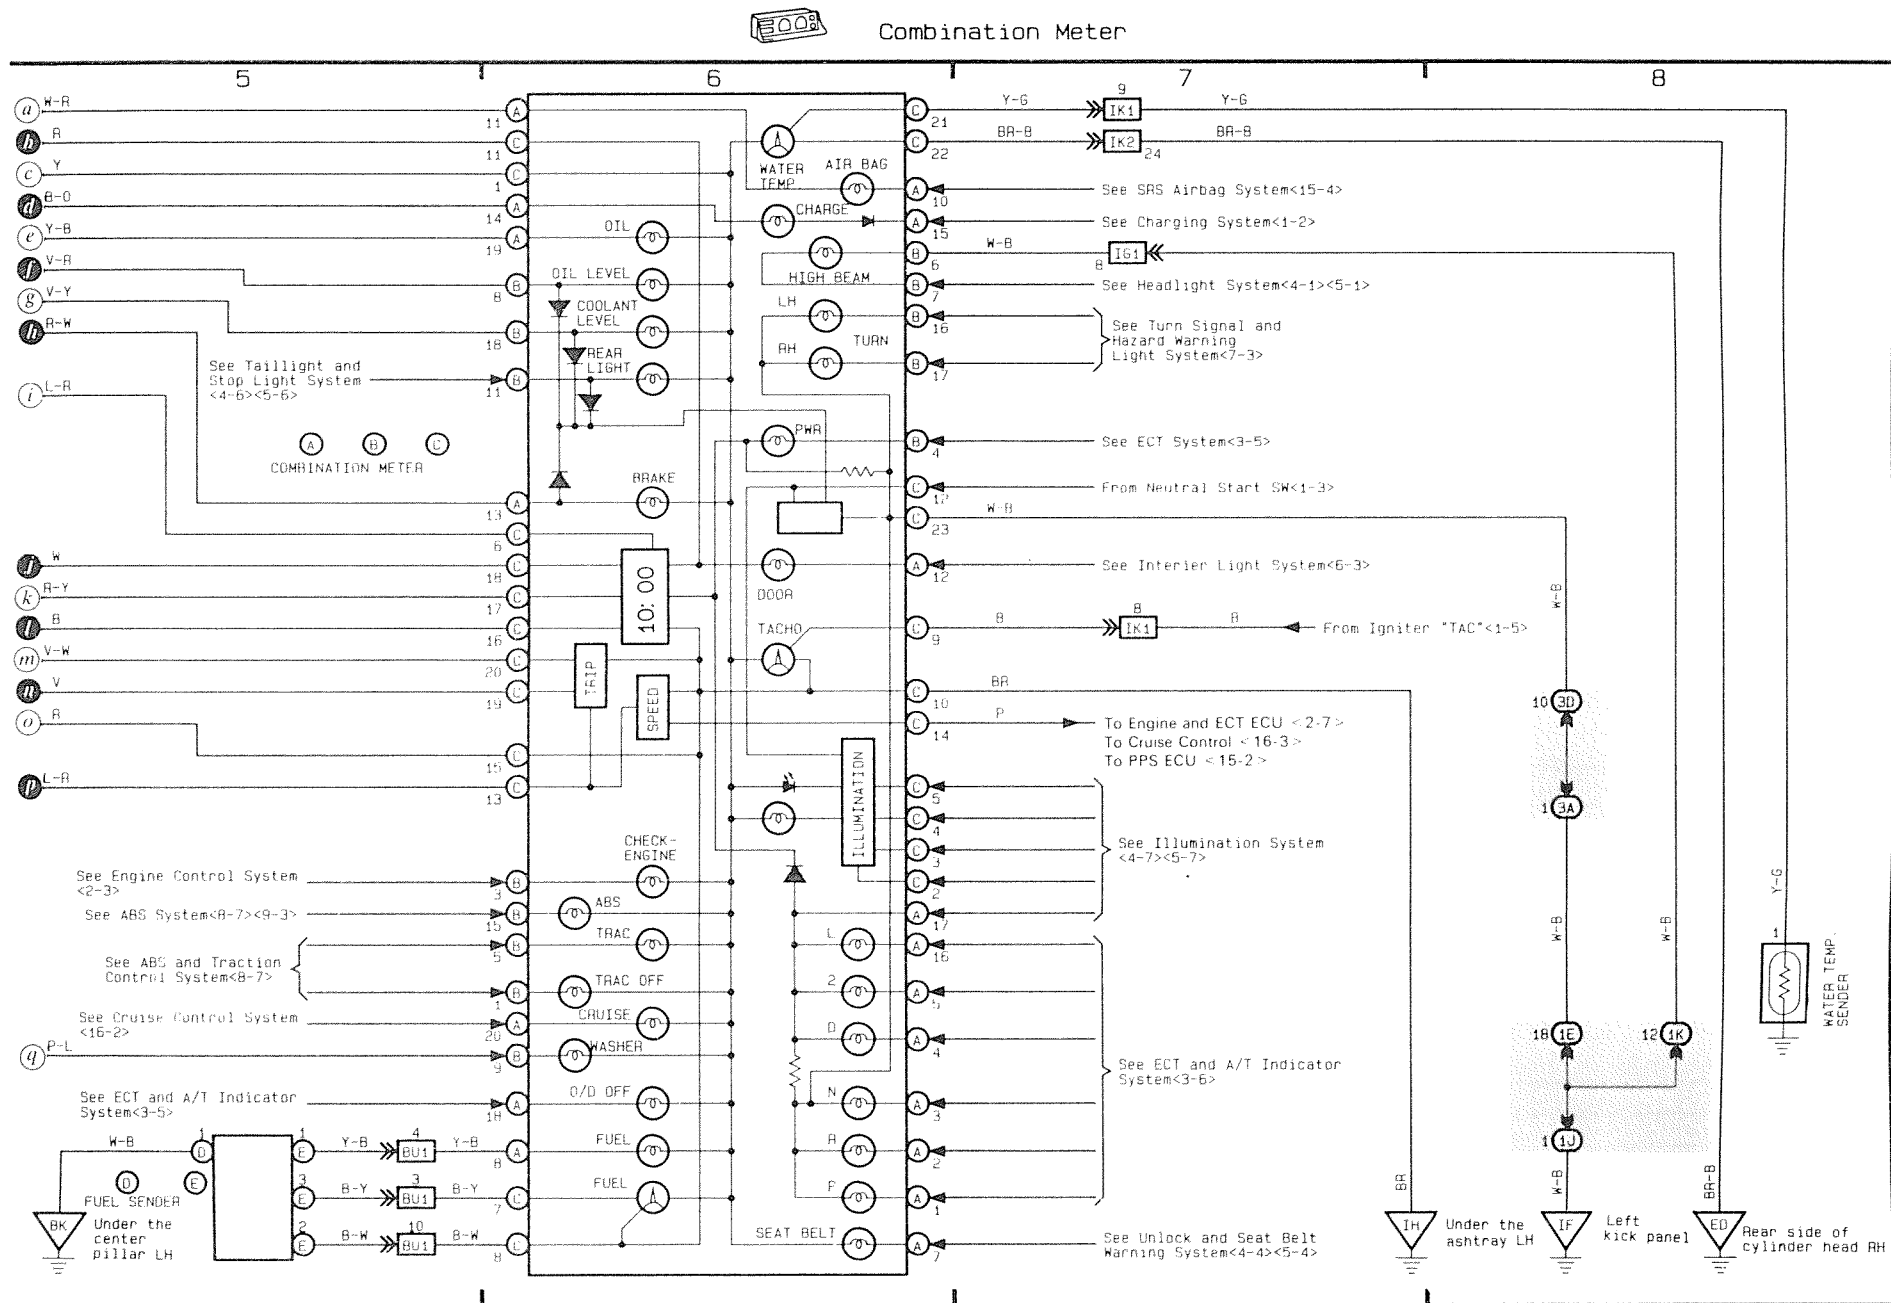

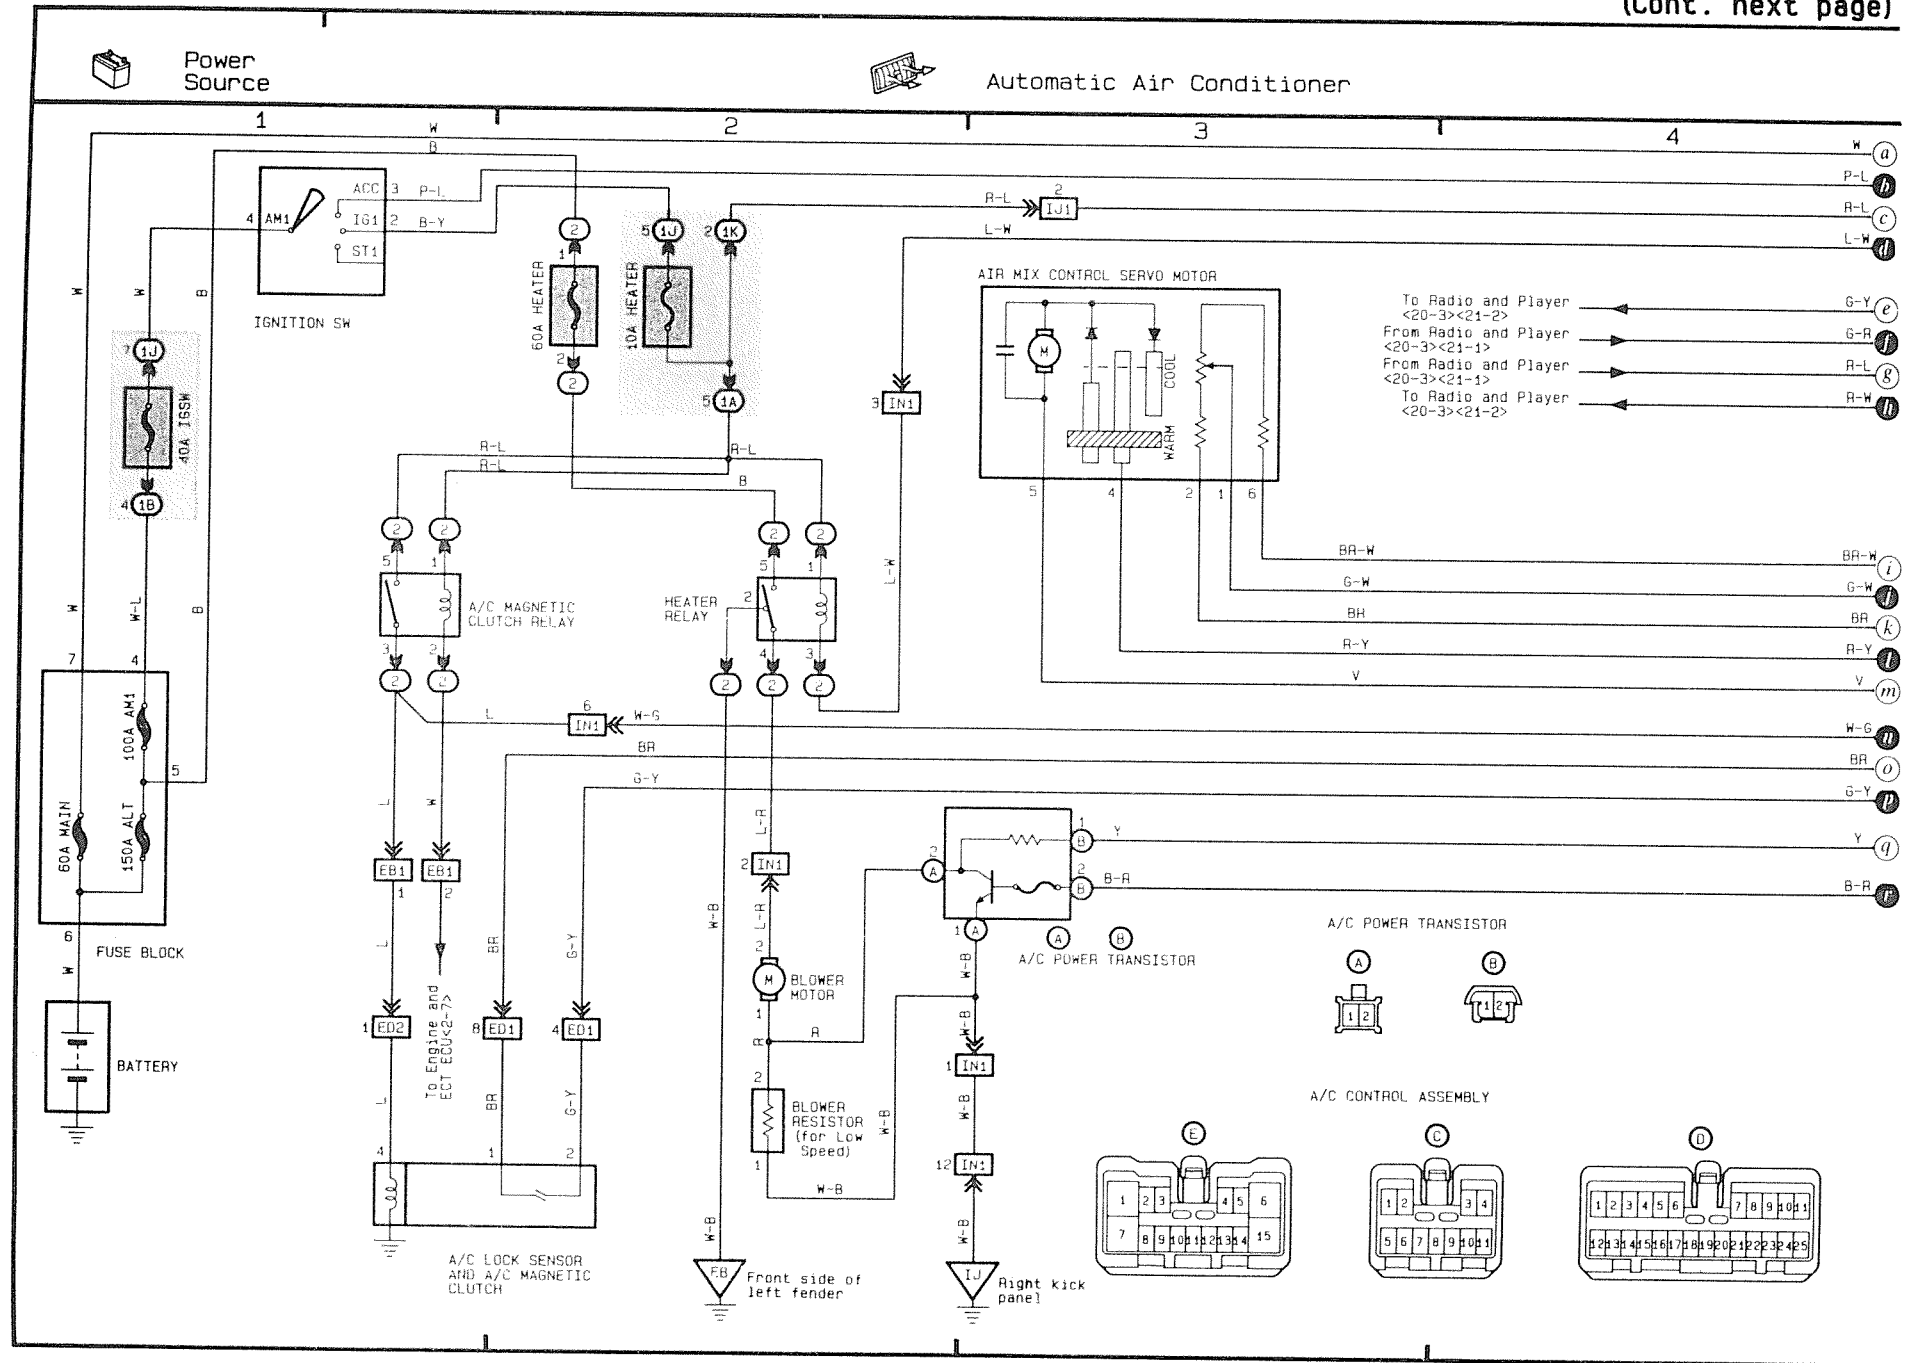





Automatic Air Conditioner

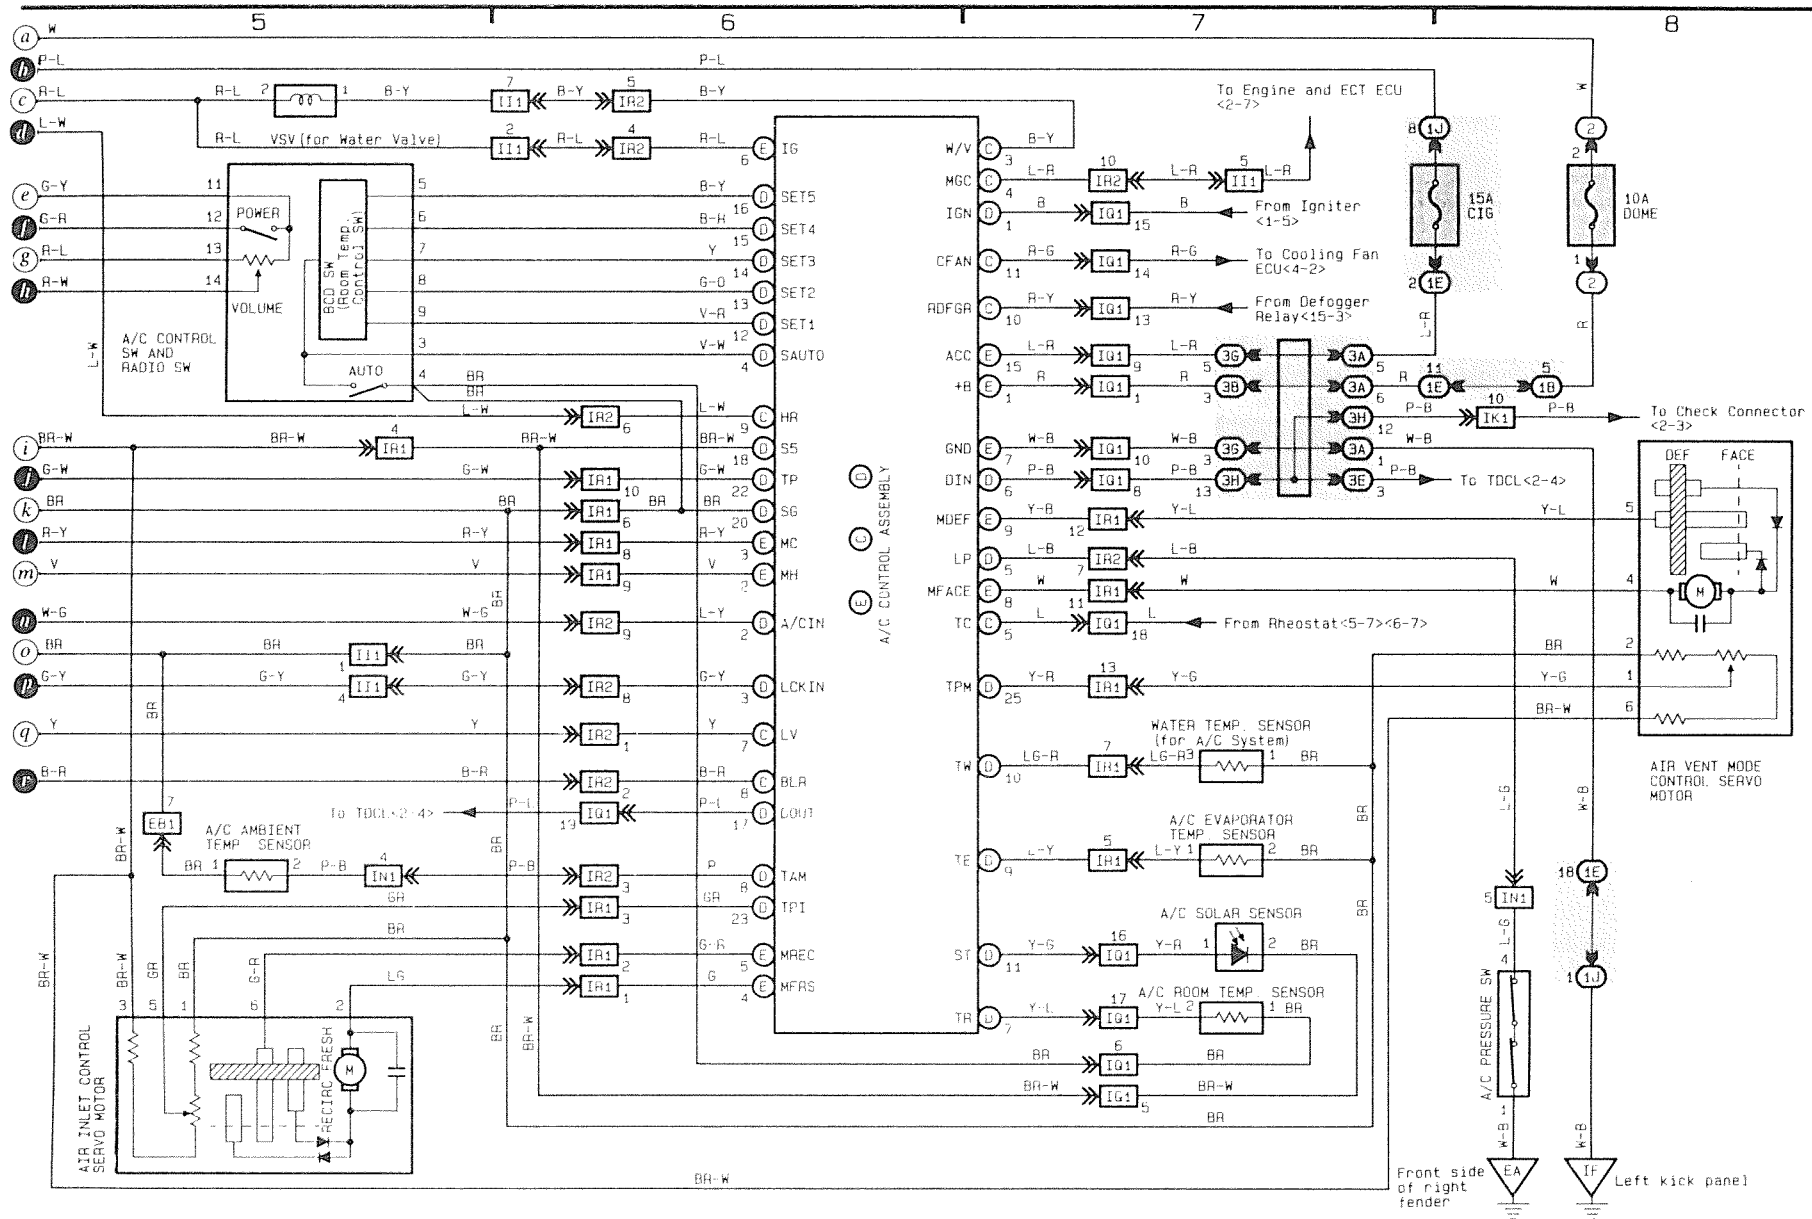


Junction Block and Wire Harness Connector J/B No.1: LEFT KICK PANEL

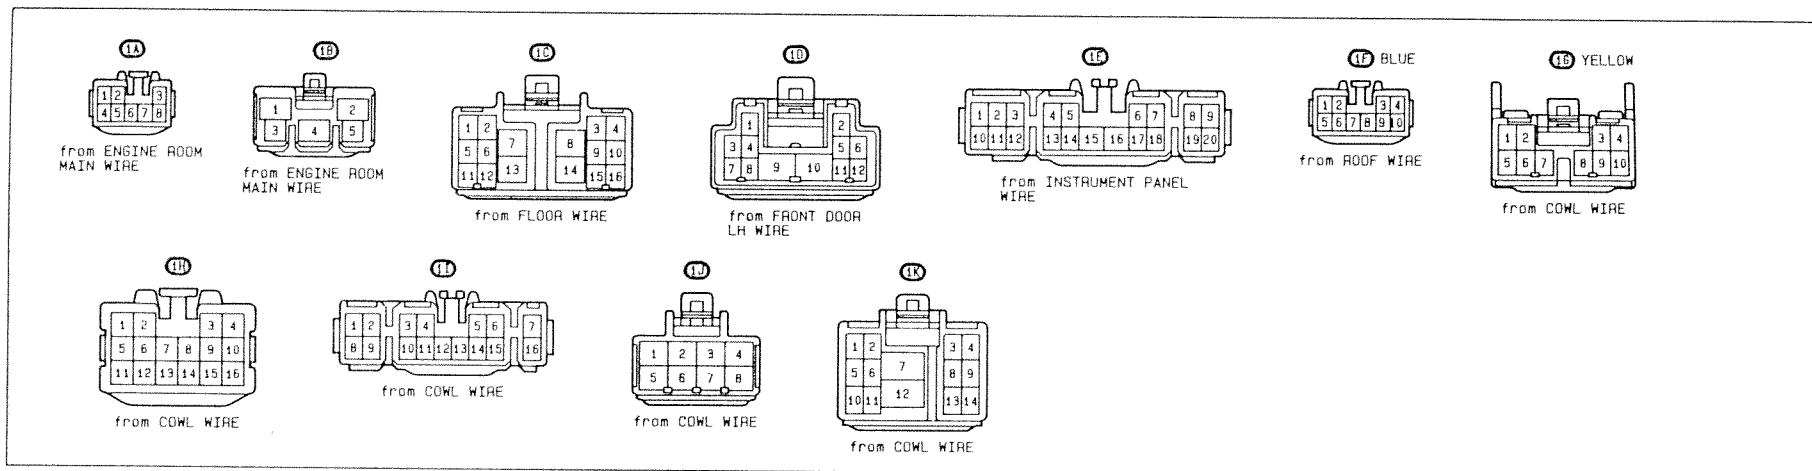


J/B No.3: BEHIND THE INSTRUMENT PANEL CENTER

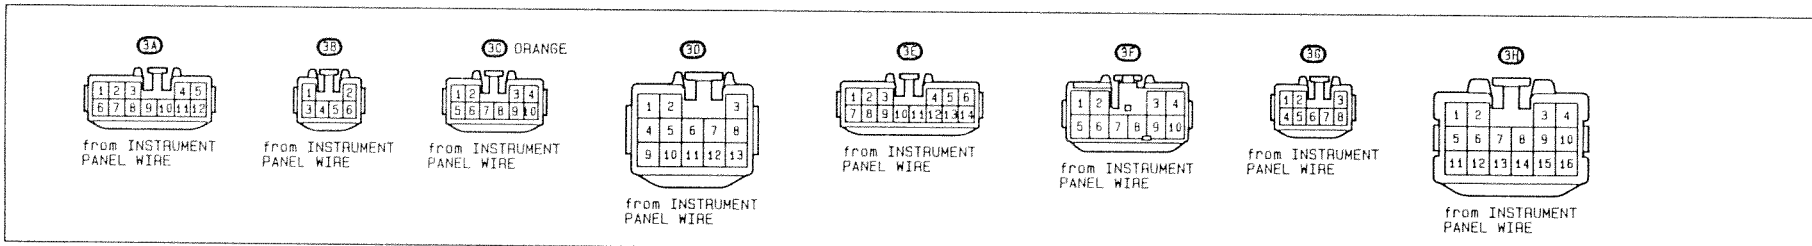


Connector Joining Wire Harness and Wire Harness (E Group: Engine Compartment Area)

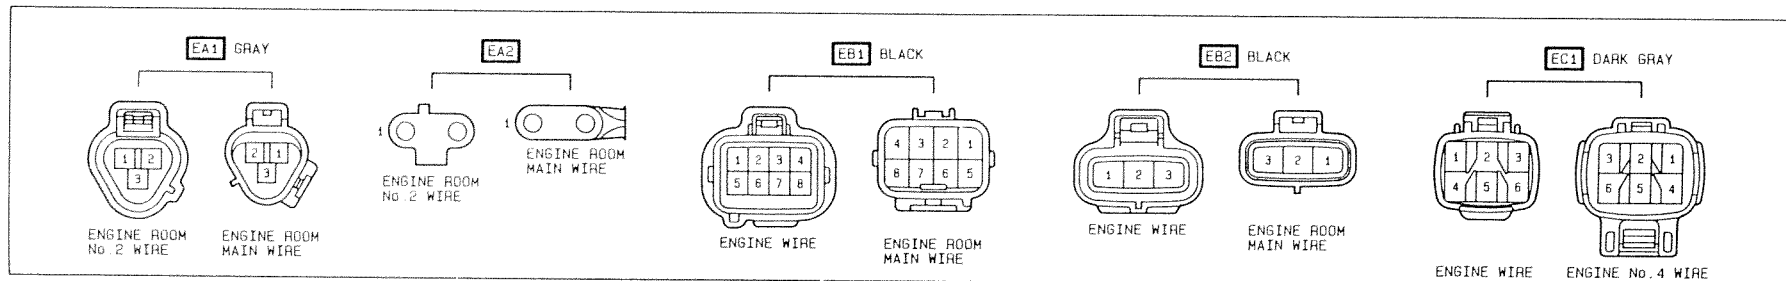


Connector Joining Wire Harness and Wire Harness (E Group: Engine compartment area) (Cont'd)

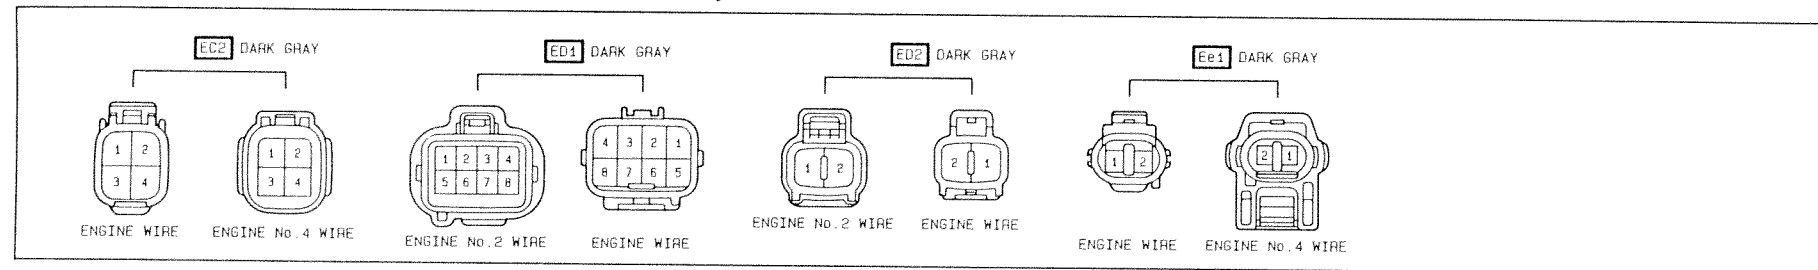

(I Group: Instrument Panel and Surrounding area)

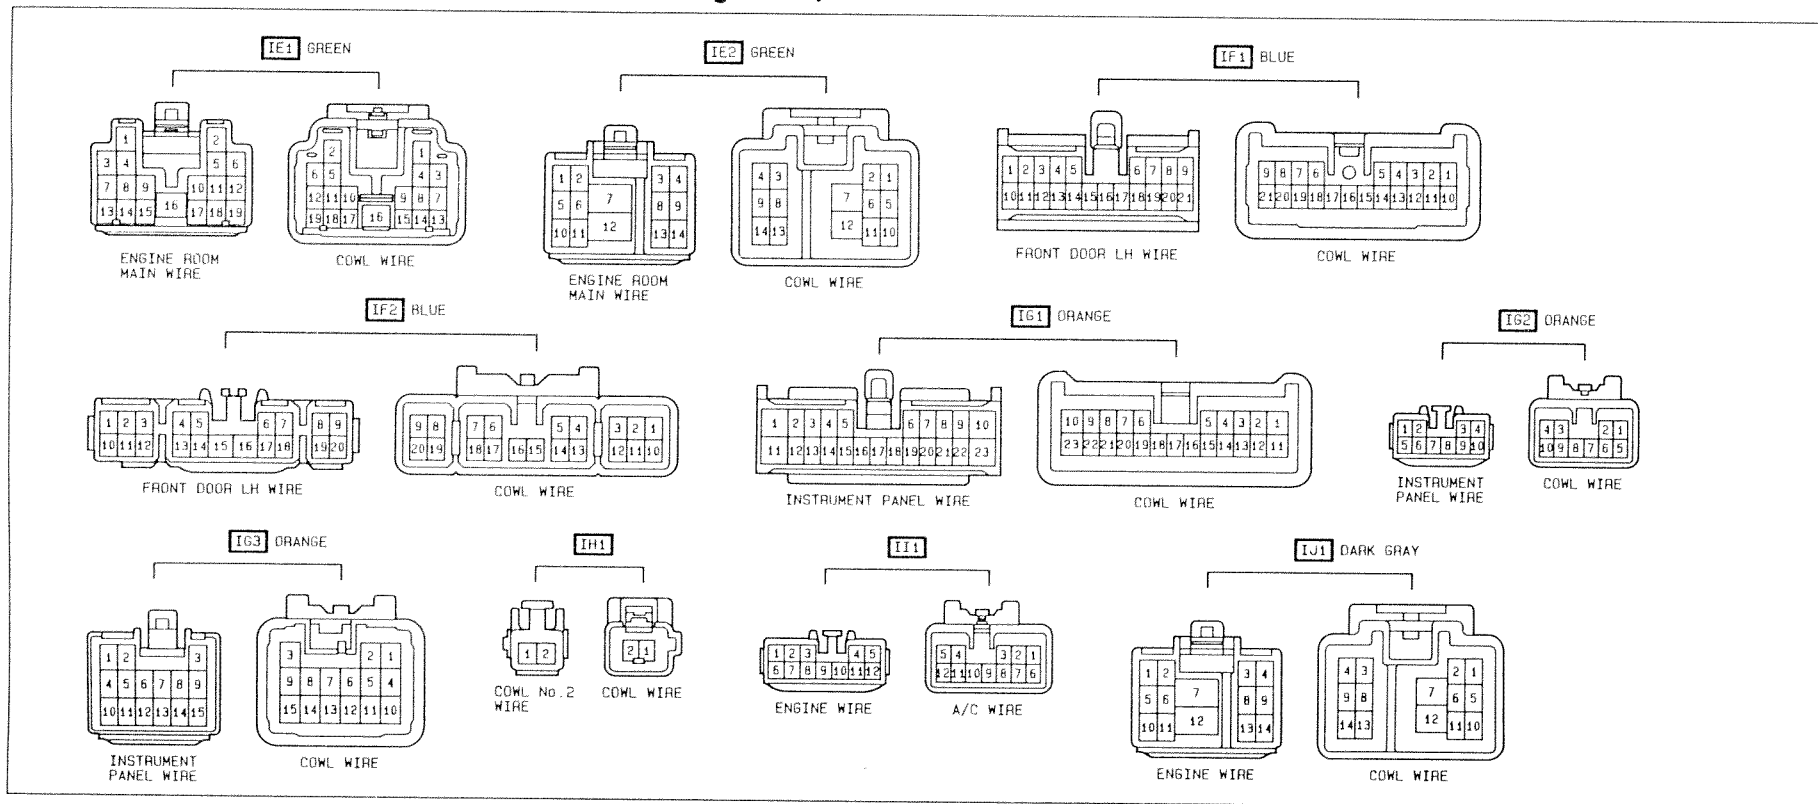

Connector Joining Wire Harness and Wire Harness (I Group: Instrument Panel and Surrounding area) (Cont'd)

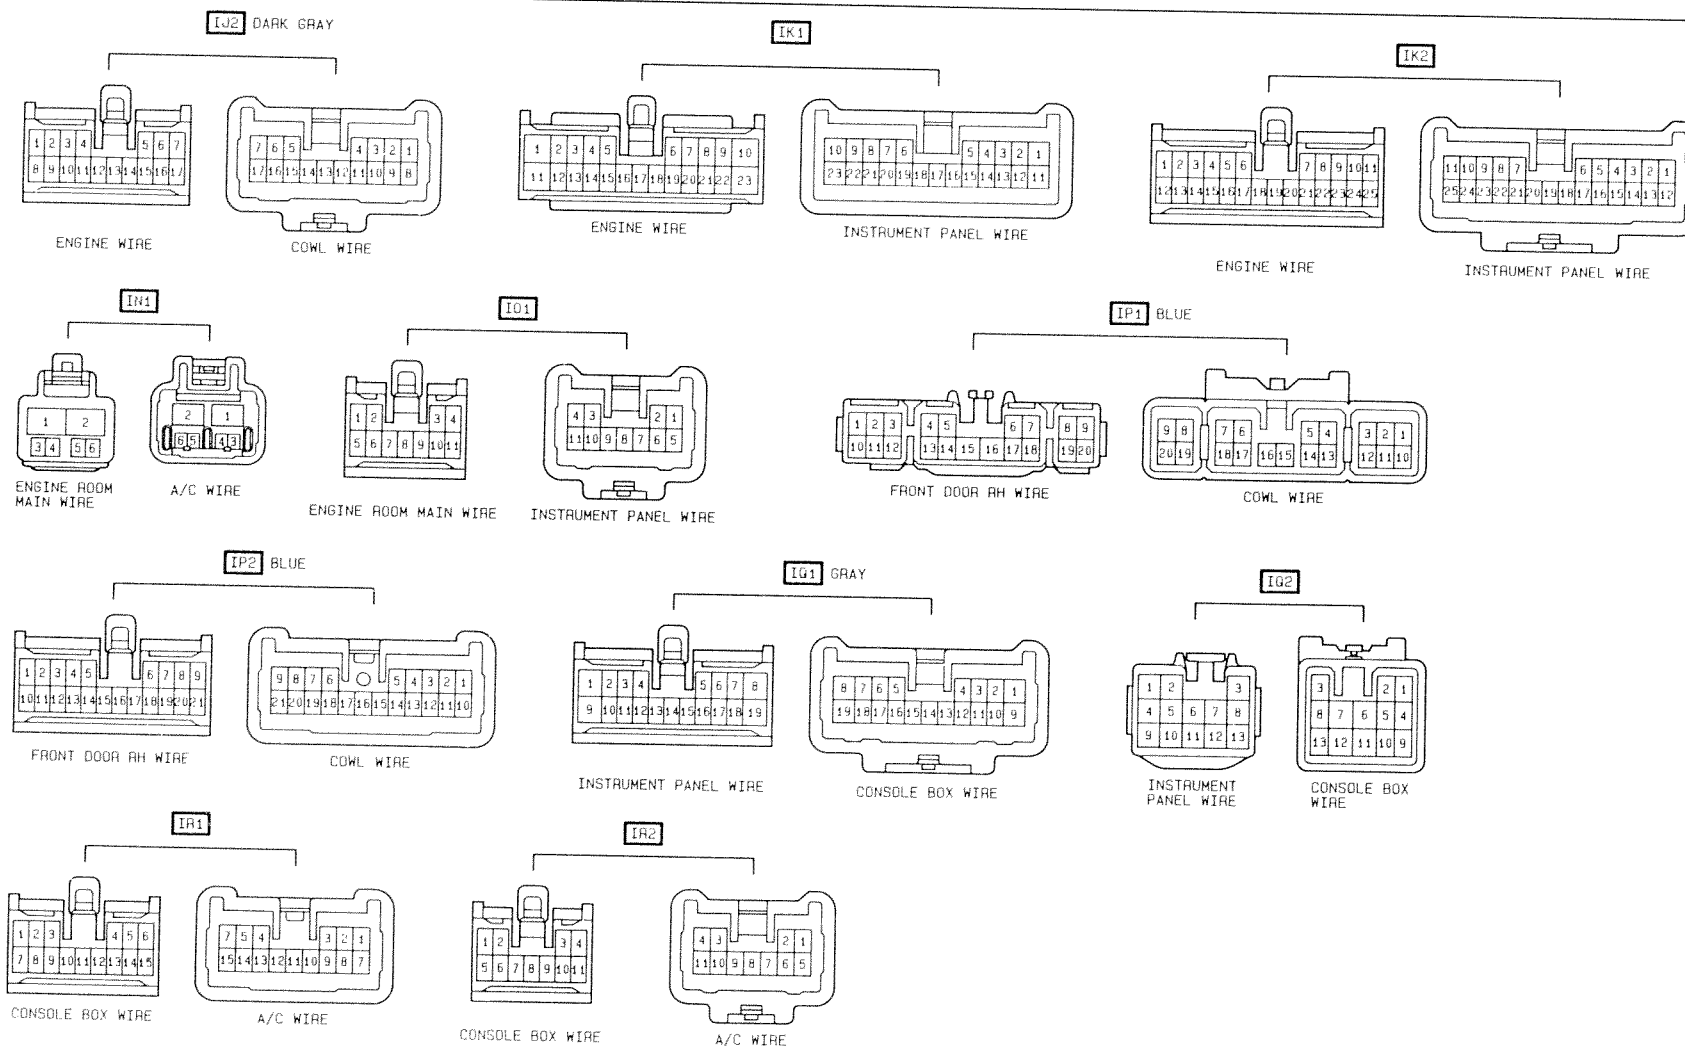

Connector Joining Wire Harness and Wire Harness (B Group: Body and Surrounding area)

