



"O" ECU Plug

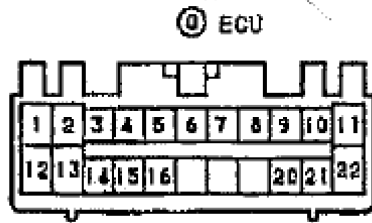


- | | | | |
|-----|--------|---|---------------------|
| 1. | Batt | 20A EFI Fuse | |
| 2. | IG | 7.5A Ignition Fuse | |
| 3. | EGW | Exhaust Gas Temp lamp | |
| 4. | H-REL | EFI Relay | |
| 5. | W | Check Engine Lamp | Check Connector "M" |
| 6. | EPR | Fuel Pump Control Relay | |
| 7. | SP2 | ECT | |
| 8. | A/CMC | A/C Magnetic Clutch | |
| 9. | SPD | Speedo | |
| 10. | A/C | A/C Amplifier | |
| 11. | STA | Starter | |
| 12. | +B1 | Circuit opening relay & EFI Relay, Same as B | |
| 13. | +B | Circuit opening relay & EFI Relay, Same as B+ | |
| 14. | H | ECT Pattern Select Switch | |
| 15. | CCO | Exhaust Temp Sensor & Check Connector | |
| 16. | TIL | Turbo Indicator Lamp | |
| 17. | XXXXXX | | |
| 18. | XXXXXX | | |
| 19. | XXXXXX | | |
| 20. | ECT | Cruise Control Computer | |
| 21. | P | ECT Pattern Select Switch | |
| 22. | HS/V | Ignition switch | |

"R" ECU Plug

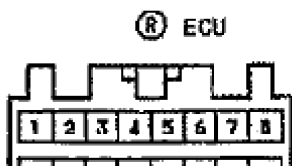

- | | | | |
|-----|------|---------------------|-----------------------|
| 6. | OX | Check Connector "N" | Oxygen Sensor |
| 7. | TT | Check Connector "M" | |
| 8. | VF | Check Connector "M" | Check Connector "N" |
| 9. | E2 | AFM | TPS/Water Temp Sensor |
| 10. | TE2 | Check Connector "M" | |
| 11. | VTA | TPS | |
| 12. | IDL | TPS | |
| 13. | KNK2 | Knock Sensor #2 | |
| 14. | OD2 | O/D Switch | |
| 15. | TE1 | Check Connector "M" | Check Connector "N" |
| 16. | G- | Distributer | |


"S" ECU Plug

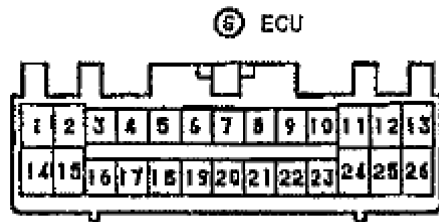

- | | | |
|-----|------|--------------------------|
| 1. | HE | Distributer |
| 2. | G2 | Distributer |
| 3. | IGF1 | Igniter |
| 4. | ISC4 | Idle Speed Control Valve |
| 5. | ISC3 | Idle Speed Control Valve |
| 6. | ISC2 | Idle Speed Control Valve |
| 7. | ISC1 | Idle Speed Control Valve |
| 8. | S3 | ECT |
| 9. | S2 | ECT |
| 10. | S1 | ECT |
| 11. | #20 | Even Injectors |
| 12. | #10 | Odd Injectors |
| 13. | EO1 | Ground |
| 14. | E1 | Ground |
| 15. | G1 | Distributer |
| 16. | IGF2 | Igniter |
| 17. | S | A/T indicator switch |
| 18. | L | A/T indicator switch |
| 19. | IGD | Igniter |
| 20. | IGT | Igniter |

"M" Check Connector


(M) CHECK CONNECTOR

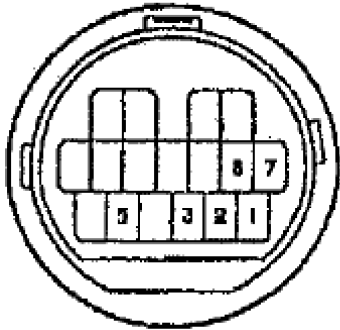

- | | | | | | |
|----|-------|---------------------|------|---------------------|-----|
| 1. | TE1 | ECU "R" | (15) | Check Connector "N" | (6) |
| 2. | TE2 | ECU "R" | (10) | | |
| 3. | E1 | Exhaust Temp Sensor | (2) | Ground | |
| 4. | XXXXX | | | | |
| 5. | TT | ECU "R" | (7) | | |
| 6. | XXXXX | | | | |
| 7. | EGH | ECU "R" | (8) | Check Connector "N" | (9) |
| 8. | V | ECU "O" | (5) | Check Engine Lamp | |

"N" Check Connector

(N) CHECK CONNECTOR

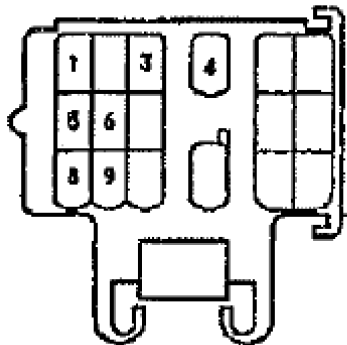

- 1.

FP
Fuel Pump
(1)
Fuel Pump
(1)

8.	+B	Oxygen Sensor (2)	Circuit Opening Relay (2)	Main EFI Relay
		ECU "O" (12)	ECU "O" (13)	
9.	VF	ECU "R" (6)	Check Connector "M" (7)	